



# Stackable All-in-One Energy Storage System

SUN-(14-20)K-SG05LP3-EU-TM3

## User Manual



# Contents

|                                                                          |              |
|--------------------------------------------------------------------------|--------------|
| <b>1. Safety Introductions</b>                                           | <b>01-02</b> |
| <b>2. Product Introductions</b>                                          | <b>03-07</b> |
| 2.1 Product Features                                                     |              |
| 2.2 Appearance and Dimensions                                            |              |
| 2.3 Interface and port introduction                                      |              |
| 2.4 Function port definition                                             |              |
| 2.5 Basic System Architecture                                            |              |
| 2.6 Maintenance of the System                                            |              |
| <b>3. Installation</b>                                                   | <b>08-14</b> |
| 3.1 Installation Precaution                                              |              |
| 3.2 Installation Tools                                                   |              |
| 3.3 Packing List                                                         |              |
| 3.4 Installation Procedure                                               |              |
| <b>4. Electrical Connection</b>                                          | <b>15-45</b> |
| 4.1 Wiring Preparation                                                   |              |
| 4.2 Cable Connection                                                     |              |
| 4.3 Post-Wiring Operations                                               |              |
| 4.4 Wiring System for Inverter                                           |              |
| 4.5 Wiring diagram with neutral line ungrounded                          |              |
| 4.6 Wiring Diagram for Single Unit Grid-Tied Partial Backup Power System |              |
| 4.7 Typical Wiring Diagram for Off-Grid Generator Connection             |              |
| 4.8 Typical Wiring Diagram for parallel system                           |              |
| <b>5. Monitoring platform</b>                                            | <b>46-53</b> |
| 5.1 Introduction of logger module                                        |              |
| 5.2 Methods to use platform                                              |              |
| 5.3 How to connect the inverter to the router via web                    |              |
| 5.4 USER MANUAL for Deye Cloud APP                                       |              |
| 5.5 USE APP to Configure WiFi                                            |              |
| <b>6. OPERATION</b>                                                      | <b>54</b>    |
| 6.1 Power ON/OFF                                                         |              |
| 6.2 Operation and Display Panel                                          |              |
| <b>7. Local monitoring via LCD</b>                                       | <b>55-75</b> |
| 7.1 Main Screen                                                          |              |
| 7.2 Detail pages                                                         |              |
| 7.3 Curve Page-Solar & Load & Grid                                       |              |
| 7.4 System Setup Menu                                                    |              |
| 7.5 Basic Setup Menu                                                     |              |
| 7.6 Battery Setup Menu                                                   |              |
| 7.7 System Work Mode Setup Menu                                          |              |
| 7.8 Grid Setup Menu                                                      |              |
| 7.9 Generator Port Use Setup Menu                                        |              |
| 7.10 Smart Devices                                                       |              |
| 7.11 Advanced Function Setup Menu                                        |              |
| 7.12 Device Info Setup Menu                                              |              |
| <b>8. Mode</b>                                                           | <b>76-77</b> |
| <b>9. Troubleshooting and Maintenance</b>                                | <b>78-83</b> |
| <b>10. Datasheet</b>                                                     | <b>84-86</b> |
| <b>11. Transportation and Storage</b>                                    | <b>86-87</b> |
| 11.1 Transportation and storage of the inverter module                   |              |
| 11.2 Transportation and storage of the battery module                    |              |
| <b>12. Disposing Instructions</b>                                        | <b>87</b>    |
| <b>13. RJ45 Port Pin Definitions</b>                                     | <b>88-89</b> |
| <b>14. Current Transformer (CT) Dimensions and Cable Length</b>          | <b>90</b>    |
| <b>14. EU Declaration of Conformity</b>                                  | <b>91</b>    |



|                | <i>Model</i>                |
|----------------|-----------------------------|
| ESS            | SUN-(14-20)K-SG05LP3-EU-TM3 |
| Battery System | AI-W16/AI-W16-H             |

## About This Manual

The manual mainly describes the product information, guidelines for installation, operation and maintenance. The manual cannot include complete information about the photovoltaic (PV) system.

## Security Declaration

For detailed information regarding the product's network security vulnerability response procedures and the disclosure of related vulnerabilities, please refer to the Deye Security Center at <https://sec.deyecloud.com>.

## How to Use This Manual

Read the manual and other related documents before performing any operation on the inverter. Documents must be stored carefully and be available at all times.

Contents may be periodically updated or revised due to product development. The information in this manual is subject to change without notice. The latest manual can be acquired via [service@deye.com.cn](mailto:service@deye.com.cn). You can download Deye's official user manual directly from "<https://www.deyeinverter.com/download/product-manual/?tag=272>"



## 1. Safety Introductions

### Labels description

| Label | Description                                                                                                                                                            |
|-------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|       | Caution, risk of electric shock symbol indicates important safety instructions, which if not correctly followed, could result in electric shock.                       |
|       | There are non-specific potential risks here, and operators need to pay attention to the corresponding important safety operation instructions.                         |
|       | Surface high temperature, Please do not touch the inverter case.                                                                                                       |
|       | The AC and DC circuits must be disconnected separately, and maintenance personnel must wait for 5 minutes before starting work after completely cutting off the power. |
|       | CE mark of conformity                                                                                                                                                  |
|       | RCM mark of conformity                                                                                                                                                 |

|                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Please read the instructions carefully before use.</p>                                                                                                                                                                                                                                                                                                                                                                                                      |
|  | <p>Symbol for the marking of electrical and electronics devices according to Directive 2002/96/EC. Indicates that the device, accessories and the packaging must not be disposed as unsorted municipal waste and must be collected separately at the end of the usage. Please follow Local Ordinances or Regulations for disposal or contact an authorized representative of the manufacturer for information concerning the decommissioning of equipment.</p> |

- This chapter contains important safety and operating instructions. Read and keep this manual for future reference.
- Before using the inverter, please read the instructions and warning signs of the battery and corresponding sections in the instruction manual.
- Please do not disassemble the inverter by yourself. If maintenance is required, please contact qualified professionals. If repairs are needed, please take it to a professional after-sales service center.
- Before performing cleaning and maintenance on the inverter, please disconnect all AC and DC side circuits to prevent electric shock.
- Caution: Only qualified personnel can install this system.
- Battery needs to be recharged within 48 hours after fully discharged.
- Never charge a frozen battery.
- To ensure the system operates at optimal performance, select appropriate cables in accordance with the specifications recommended in this manual and local regulations during installation, which is critical for the safe and normal operation of the system.
- During the entire installation process, do not place metal tools, screws and other conductive objects randomly on or around the battery. Keep full control of the metal tools in your hands during operation to avoid accidental contact with the battery positive terminal which may cause short circuit or arcing risks.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to "Installation" section of this manual for the details.
- Grounding instructions - this system should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this system.
- Never cause AC output and DC input short circuited. Do not connect to the mains when DC input short circuits.

### Radio Interference Statement

The equipment may radiate radio frequency energy. If the instructions are not followed during installation and use of the equipment, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation situation. If this equipment causes harmful interference to radio or television reception, the following measures can be taken to resolve the problem:

- ✓ Relocate the receiving antenna away from the equipment.
- ✓ Seek assistance from the distributor or an experienced radio/TV technician.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

## 2. Product Introductions

This is an All-in-One energy storage system that incorporates 14/15/16/18/20 kW three-phase hybrid inverter modules and energy storage batteries. Featuring a modular stacking design, it is easy to install and expand, with a battery capacity ranging from 16 kWh to 96 kWh (each individual battery pack has a capacity of 16 kWh). It uses lithium iron phosphate cells for high safety and reliability.


The integrated inverter module is a multi-functional unit that combines the functions of a bidirectional AC/DC inverter-rectifier module, a solar charger and a battery charger. It supports grid-tied, off-grid and seamless grid-tied/off-grid switching modes, providing users with uninterrupted power supply. Equipped with a large-size LCD display, physical buttons and status indicators, it offers a user-friendly interface for convenient local system configuration and operation status monitoring. It also comes with a data logger interface, enabling remote monitoring via the APP or web platform.

| Energy storage system (ESS) Model                                           | Quantity of battery configured |
|-----------------------------------------------------------------------------|--------------------------------|
| SUN-14K-SG05LP3-EU-TM3                                                      | 2                              |
|                                                                             | 3                              |
|                                                                             | 4                              |
|                                                                             | 5                              |
|                                                                             | 6                              |
| SUN-15K-SG05LP3-EU-TM3                                                      | 2                              |
|                                                                             | 3                              |
|                                                                             | 4                              |
|                                                                             | 5                              |
| SUN-16K-SG05LP3-EU-TM3                                                      | 6                              |
|                                                                             | 2                              |
|                                                                             | 3                              |
|                                                                             | 4                              |
|                                                                             | 5                              |
| SUN-18K-SG05LP3-EU-TM3                                                      | 6                              |
|                                                                             | 2                              |
|                                                                             | 3                              |
|                                                                             | 4                              |
|                                                                             | 5                              |
| SUN-20K-SG05LP3-EU-TM3                                                      | 6                              |
|                                                                             | 2                              |
|                                                                             | 3                              |
|                                                                             | 4                              |
|                                                                             | 5                              |
| Note: model variants based on the number of batteries connected, up to 6pcs |                                |

## 2.1 Product Features

- Self-consumption and Feed-in Tariff Mode.
- Auto Grid Reconnection Function.
- Power Supply Priority Configuration Function for PV, Battery and Grid.
- Support grid-tied mode, off-grid mode, and seamless bidirectional transition between grid-tied and off-grid states.
- Charging current and voltage can be configured through local LCD or cloud platform.
- Configure the priority of battery charging from the grid, PV and generator via the local LCD or cloud platform.
- Compatible with main power and generator power.
- Overload/over temperature/short circuit protection.
- Smart battery charger design for optimized battery performance
- With anti-backflow function to prevent excess power from being fed into the grid.
- Built-in Wi-Fi/4G module supports remote monitoring via cloud APP/web, with 2 MPPT trackers.
- Smart three-stage charging strategy with customizable settings can optimize battery performance.
- Time of use function.
- Smart Load Function.
- Lora function(optional)

## 2.2 Appearance and Dimensions

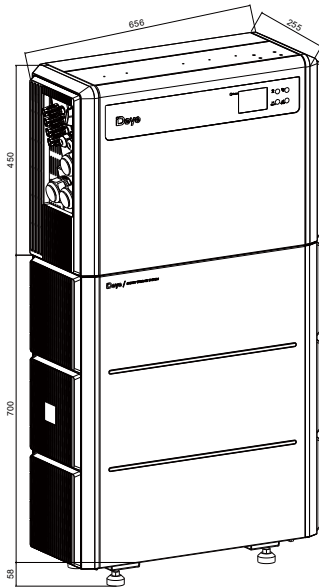


 **SUN-(14-20)K-SG05LP3-EU-TM3**

 **AI-W16/AI-W16-H**


The preceding figure takes one AI-W16 battery as an example to show the appearance.

## 2.3 Interface and port introduction


### 2.3.1 Inverter module

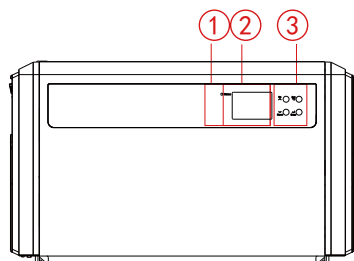


Front View

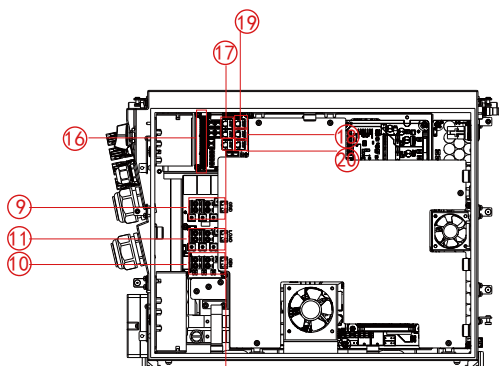

Front view(Opened)

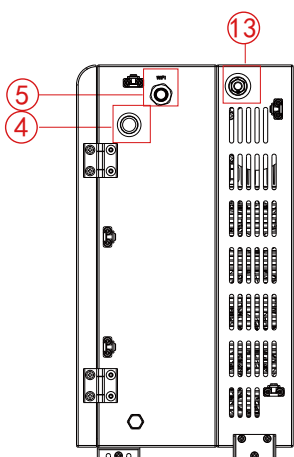

Right View

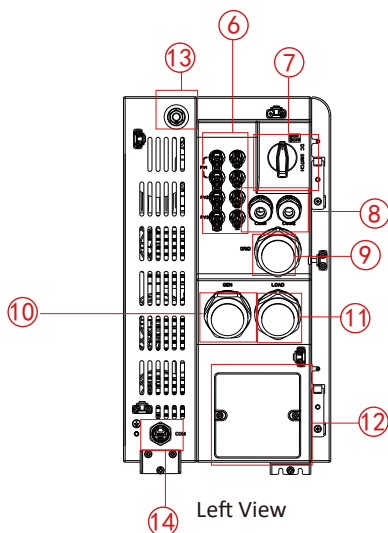


Left View

- |                       |                           |                      |
|-----------------------|---------------------------|----------------------|
| 1: Indicator          | 8: Comm cable inlet       | 15: DRM port         |
| 2: LCD display        | 9: Grid cable inlet       | 16: Function port    |
| 3: Function buttons   | 10: Generator cable inlet | 17: Parallel port    |
| 4: Power button       | 11: Load cable inlet      | 18: Modbus Port      |
| 5: Wi-Fi antenna      | 12: Battery port          | 19: BMS 485/CAN Port |
| 6: PV input interface | 13: Handle mounting bolts | 20: Meter-485 Port   |
| 7: DC Switch          | 14: BMS Comm port         |                      |

### 2.3.2 Battery module

For the introduction of the functional interfaces of the battery module, please refer to the quick guide and user manual and user manual of the battery.

2.4 Function port definition

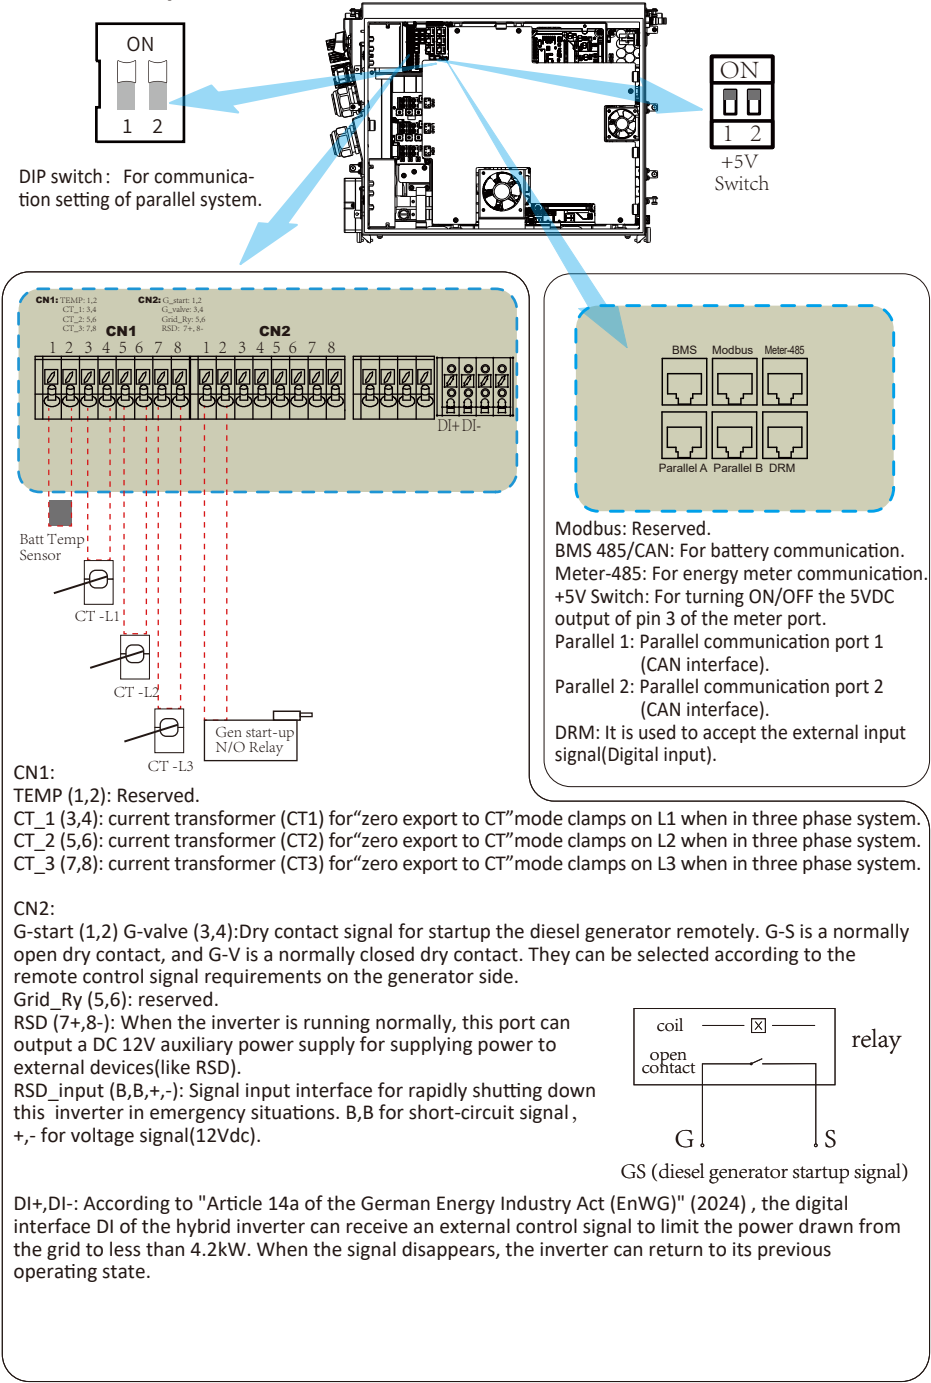

## 2.5 Basic System Architecture

The system diagram below illustrates the typical application scenarios based on this All-in-one Energy Storage System..


It may also includes following devices to have a Complete running system.

-Generator or power grid, or both

-PV array

Consult with your system integrator for other possible system architectures depending on your requirements.

This system can supply power for various electrical appliances in household or office scenarios, including motor-type appliances such as refrigerators and air conditioners.

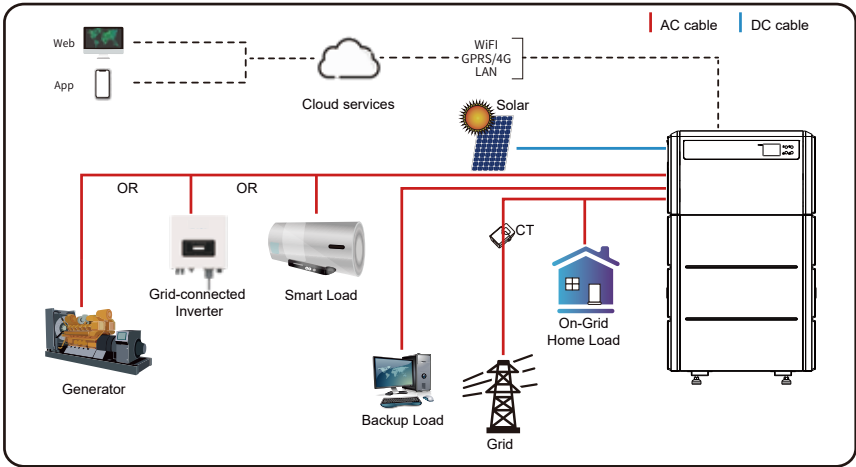

## 2.6 Maintenance of the System

This system features low operation and maintenance thresholds. Its core maintenance requirement is to perform dust cleaning on the cooling fans and air ducts every 6 months to prevent accumulated dust from impairing the heat dissipation performance. If the equipment is deployed in a high-dust environment, the cleaning frequency shall be reasonably increased.

In daily operation and maintenance, it is also necessary to simultaneously check the fault code status of the inverter and the battery, and confirm that the communication link between the inverter and the lithium battery is operating normally.

The product shall be moved indoors or to a dry environment for maintenance.

### 3. Installation


#### 3.1 Installation Precaution

The equipment supports both indoor and outdoor installation. Installation must comply with the instructions in this section and local laws and regulations. Please make sure the installation site meets below conditions:

- Not in areas where highly flammable materials are stored.
  - Not in potential explosive areas.
  - Do not direct cold air at the equipment to avoid condensation.
  - Not near the television Antenna or antenna cable.
  - Not higher than altitude of about 3000 meters above sea level.
  - Do not install in an environment with humidity > 95%.
  - Do not install in areas within 500 meters from the coastline.
  - Please AVOID direct sunlight, rain exposure, snow laying up during installation and operation.
- Tips: To ensure optimal performance of the device, it is suggested that the installation distance between the device and surrounding obstacles be planned with reference to the diagram below. If the installation site is well-ventilated, the optimal solution may be deployed based on actual conditions.

#### Recommended Clearance

During product installation, the following clearance requirements shall be met between the product and surrounding buildings and objects:

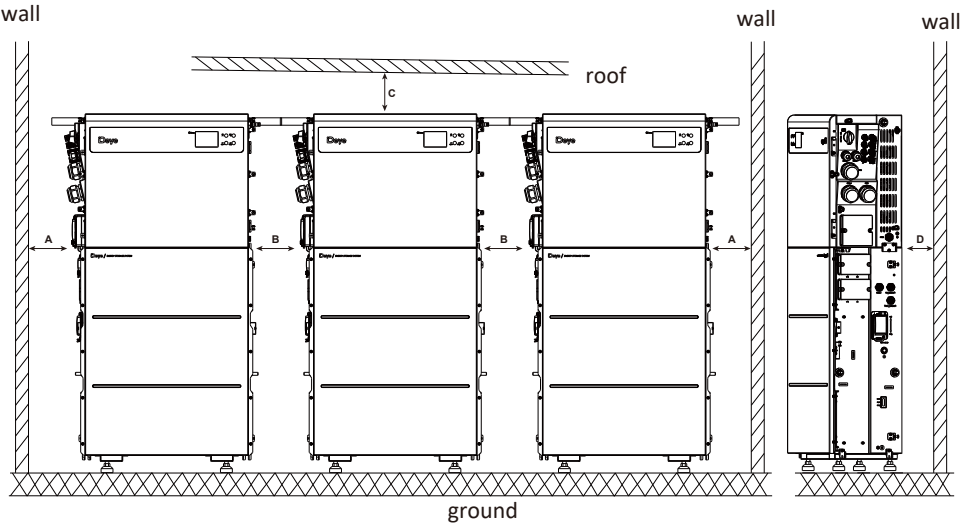

| Item | Distance(mm) |
|------|--------------|
| A    | ≥220         |
| B    | ≥135         |
| C    | ≥500         |
| D    | 0-35         |



### 3.2 Installations Tools


Installation tools can refer to the following recommended ones. Also, use other auxiliary tools on site.



Protective goggles



Anti-dust mask




Earplugs




Work gloves



Work shoes




Utility Knife




Slotted screwdriver



Cross screwdriver




Percussion drill



Pliers



Marker



Level



Rubber hammer



socket wrenches set




Anti-static wrist strap



Wire cutter



Wire stripper



Hydraulic pliers



Heat gun



Crimping tool4-6mm<sup>2</sup>



Solar connector wrench



Multimeter ≥1100 Vdc



RJ45 crimping plier



Cleaner







Spanner


### 3.3 Packing List

Open the packaging box of the inverter and battery modules, check whether all components are fully supplied against the packing lists included with the inverter and the battery packaging box, and make sure nothing is damaged in the package before installation. For any problem, contact your supplier.

#### Inverter package

|                                                                                                                                            |                                                                                                                           |                                                                                                                                   |                                                                                                                         |                                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Hybrid inverter<br>x1                                 | <br>T-type socket wrench *1              | <br>Meter (optional)<br>x1                       | <br>M10 Flange Nut*2                   | <br>Stainless steel mounting<br>screws M4*12 x2               |
| <br>Solar Photovoltaic<br>Connector Special<br>Spanner x1 | <br>DRM connector<br>x 1                 | <br>Sensor Clamp<br>x3                           | <br>User manual x1                     | <br>DC+/DC- Plug connectors<br>including metal terminal<br>x2 |
| <br>Magnetic ring for Meter<br>communication<br>cable x1  | <br>Magnetic ring x3                     | <br>Left decorative panel x1                     | <br>Right decorative panel x1          | <br>Handle x4                                                 |
| <br>Communication<br>cable with BMS x1                    | <br>Parallel communication<br>cable* x1 | <br>Connector assembly<br>(Battery to Inverter) | <br>Magnetic ring for Grid<br>port x1 | <br>Magnetic ring for Load<br>and GEN ports x1               |

#### Packing box of magnetic ring

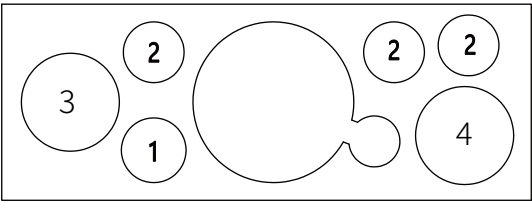

- 1: 33x23x15 mm
- 2: 31x29x19 mm\*3
- 3: 27x46x25 mm
- 4: 55.5x33x23 mm

Parallel communication cable\*: The standard supplied length is 2 meters. If a longer parallel communication cable is required, please purchase or fabricate it separately. Without a repeater, the recommended maximum length for a single cable shall not exceed 5 meters.

## Battery module packaging box

For the content of the battery accessory kit, please refer to the corresponding chapters of the battery quick installation manual and battery manual. Scan the QR code below to enter the "Download Center", and enter "AI-W16" in the keyword dialog box to find the download link for the user manual of the AI-W16 battery module in the search results, or click directly "<https://deyeess.com/downloads/####>". Repeat the above steps to obtain the download link for the battery module user manual.




## 3.4 Installation Procedure

### 3.4.1Unpacking the Product

Open the inverter module packing box and take out the four handles (four in total) from the inverter accessory kit. Fix the handles onto the handle mounting bolts on the left and right sides of the inverter module respectively (refer to Section 2.3 for the positions).

1-2 individuals should hold the handles fixed on both sides of the inverter module and carefully remove it from the cardboard box. If it needs to be temporarily placed on the ground, please cushion the bottom of the inverter module with soft materials such as pearl foam to prevent damage.

Similarly, before installing the battery module, please remove it from the cardboard box in a similar manner.

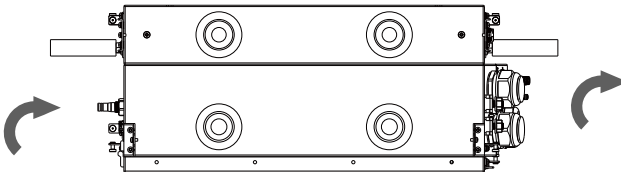

Note: After using the handles, please keep them properly along with the user manual, as it will still be needed in subsequent installation steps and during the later operation and maintenance stages.

**CAUTION:**

Improper handling may cause personal injury!

- Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.
- Placing the inverter and battery module directly on a hard ground may cause damage to their metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.
- The inverter and battery modules are heavy. Please use sufficient personnel or appropriate tools for handling.
- Grip the handles on the inverter and battery modules instead of the terminals to move them, so as not to damage the terminals.
- The inverter and energy storage battery modules are of heavy weight. During handling operations, strictly prevent the equipment from slipping and falling to avoid personal crush injury.
- It is strictly forbidden to move the equipment by dragging, so as to prevent damage to the equipment shell and wiring parts.

### 3.4.2 Battery Installation Procedures

For detailed installation steps of the battery modules, please refer to the Quick Guide included in the battery module packaging box and the user manual which can be downloaded through the QR code inside the Quick Guide.

**Note:**


- Before installation, be sure to turn the manual switch of the components of the product to the OFF position, live operation is strictly prohibited.
- This product is heavy. If a forklift is used for handling and installation, ensure cooperative operation by multiple personnel to prevent tipping or falling.
- A single array allows a maximum stack of 2 battery packs.
- All screws and expansion bolts must be tightened to ensure firm connection.
- When drilling holes, pay attention to prevent dust from entering the battery, which may affect the battery performance and function. Installer shall avoid the wires and pipes inside the wall when they drill the hole on the wall.
- After drilling, never forget to clean up the floor.

### 3.4.3 Inverter Installation Procedures

#### Pre-Installation Notes

Before stacking the inverter on the battery:

- Ensure the battery unit has been securely mounted

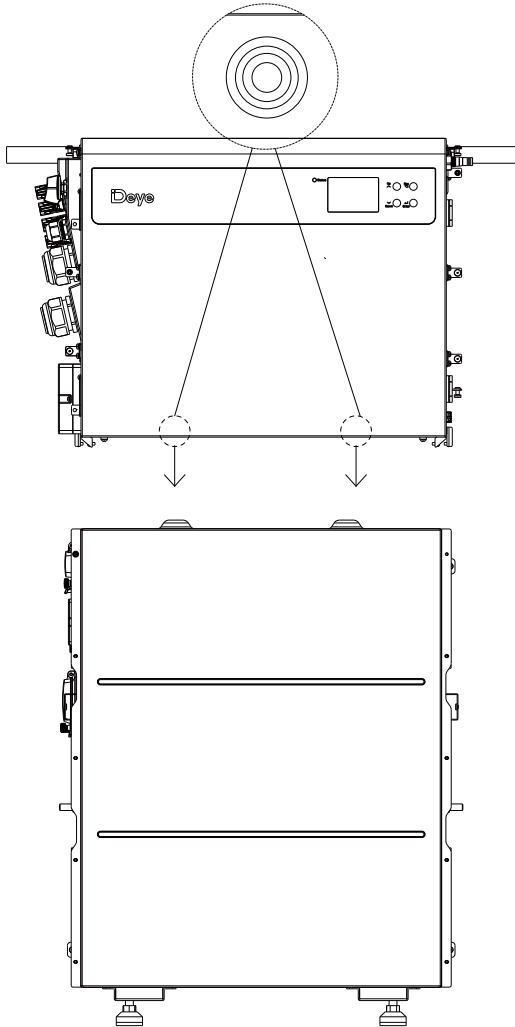

Pic 3.4.3-1

- Carefully inspect the positioning boss on top of the battery and the positioning recess on the underside of the inverter. Make sure both surfaces are clean, free of debris, and undamaged.

Step1:Lift the inverter above the already fixed battery.

Step2: Align the positioning groove at the bottom of the inverter with the positioning protrusion at the top of the battery, and slowly lower the inverter vertically downwards.


Caution: If the inverter is not properly seated in place, do not forcefully push it from the side or press it down from the top, so as to avoid damaging the positioning components.

Step3: Inspection and Confirmation.

After placing the inverter, perform visual and manual checks to verify that it is lying flat on the battery without any visible gap between it and the battery module. Ensure that the positioning bosses of the battery are fully inserted into the grooves of the inverter.

Step 4: Tighten

Insert the provided screws (M4x12, 2 on each side, total of 4) into the screw holes used to secure the inverter and battery. Tighten the screws with the recommended torque(1.5 N·m ) to firmly secure the inverter module to the battery.

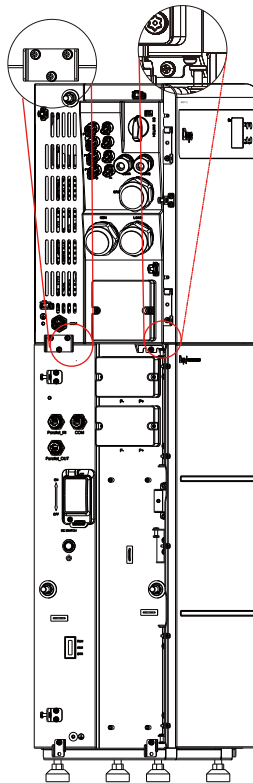

Pic 3.4.3-2

## 4 Electrical Connection

### Safety Precautions



#### WARNING

- Only qualified electrical professionals may install and operate the product.
- The product can only be used in situations equipped with overvoltage protection devices.
- Do not place the equipment on a flammable surface.
- Do not perform electrical connections during sandstorms or when the relative humidity of the surrounding environment is greater than 95%.
- Do not contact live parts directly without protection
- Before installation, ensure that there is no voltage on the AC side and DC side.
- Only allow connection of "+" to "+" and "-" to "-".
- When connecting battery pack to inverters or connecting several battery stacks in parallel, please use the cables provided in the unpacking list. If other cables must be used under special circumstances, ensure they comply with relevant standards.
- Before connecting cables, check that the polarity of all input cables is correct. Do not pull wires and cables forcibly during electrical installation; otherwise, the insulation performance may be affected. Ensure all cables have sufficient bending space and take necessary auxiliary measures to reduce cable stress.
- After each connection is complete, carefully check whether the connection is correct and secure.

### 4.1 Wiring Preparation

#### 4.1.1 Cable Preparation

If there are multiple stacks and parallel bases need to be used for battery parallel wiring, please refer to the battery Quick Guide and user manual to reassemble the connector assembly first.


Scan the QR code below to enter the "Download Center", and enter "AI-W16" in the keyword dialog box to find the download link for the user manual of the A-W16 battery module in the search results, or click directly "<https://deyeess.com/downloads/####>"

"Repeat the above steps to obtain the download link for the battery module user manual.



4.1.2 Remove dust covers


1.Unscrew the fastening screws on the dust covers of the battery power terminal area on the cabinet and battery module, and remove the dust covers, as shown in the figure below.

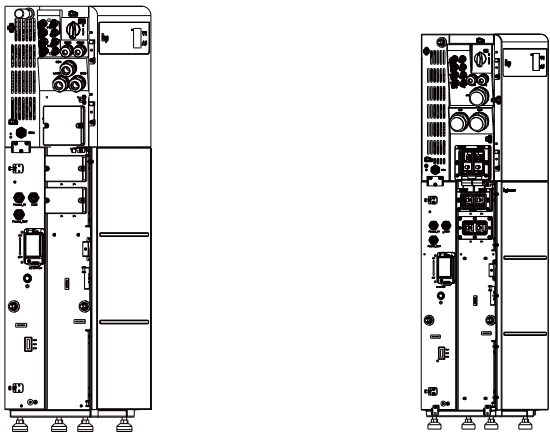

4.2 Cable Connection

4.2.1 Earth connection

4.2.1.1 Earth connection of the Inverter module

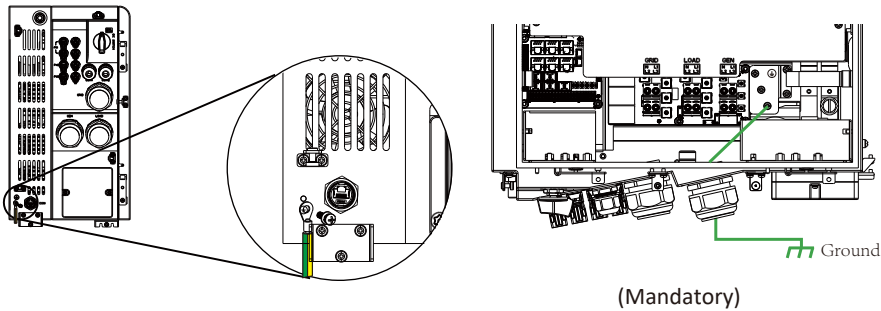

Earth connection (Copper wires)

| Model            | Wire Size | Cable(mm ) | Torque value(max) |
|------------------|-----------|------------|-------------------|
| 14/15/16/18/20kW | 4AWG      | 16         | 1.2Nm             |

Earth connection (Copper wires) (Bypass)

| Model            | Wire Size | Cable(mm ) | Torque value(max) |
|------------------|-----------|------------|-------------------|
| 14/15/16/18/20kW | 4AWG      | 16         | 1.2Nm             |





**Warning:**


Inverter has built-in leakage current detection circuit, The type A RCD can be connected to the inverter for protection according to the local laws and regulations. For the RCD installed directly between the inverter Grid port and the household load, its operating current shall be no less than 300mA. RCDs installed at other positions can adopt specifications with higher sensitivity,

#### 4.2.1.2 Earth connection of battery pack



**WARNING:**

- The bottom battery pack of each stack must be reliably grounded.

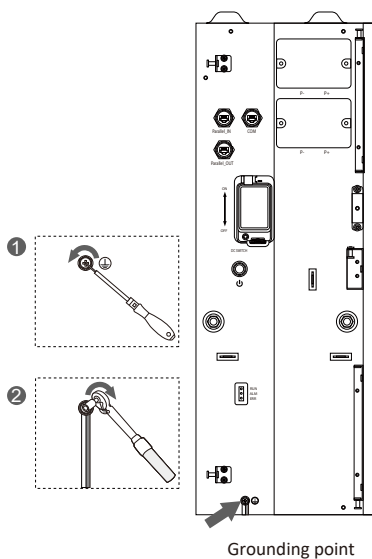


Use a cross screwdriver to remove the M4x12 grounding screw at the base grounding point. After installing the yellow green grounding cable, use a torque wrench to re tighten the M4 \* 12 grounding screw to the grounding point, and reliably connect the other end of the grounding cable to the grounding bar (usually inside the distribution box). Recommended torque for M4 \* 12 bolts: 1.5 N · m

4.2.2 Battery Cable Connection


Battery wiring Post-Completion Overview:

Single-stack wiring

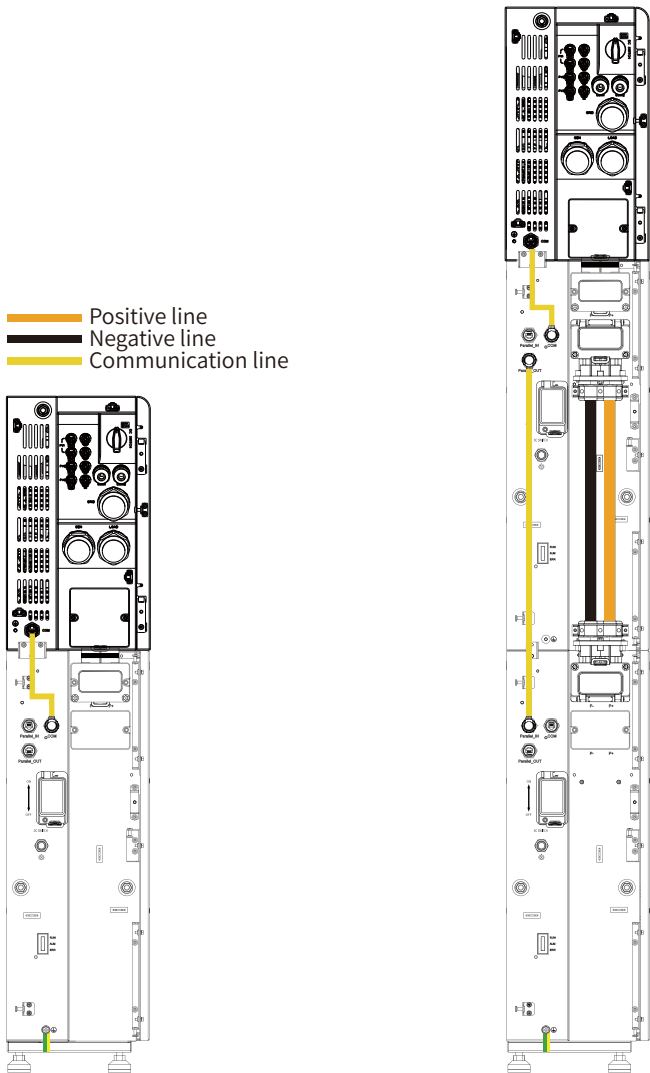


Multi- stack wiring


Mode 1:

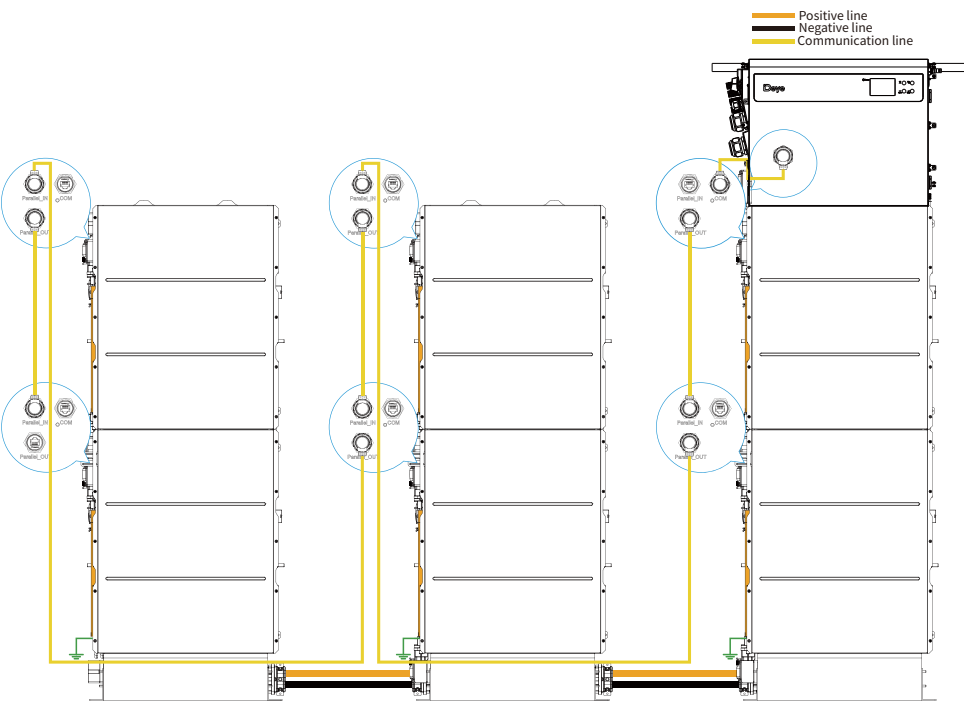

Mode 2:

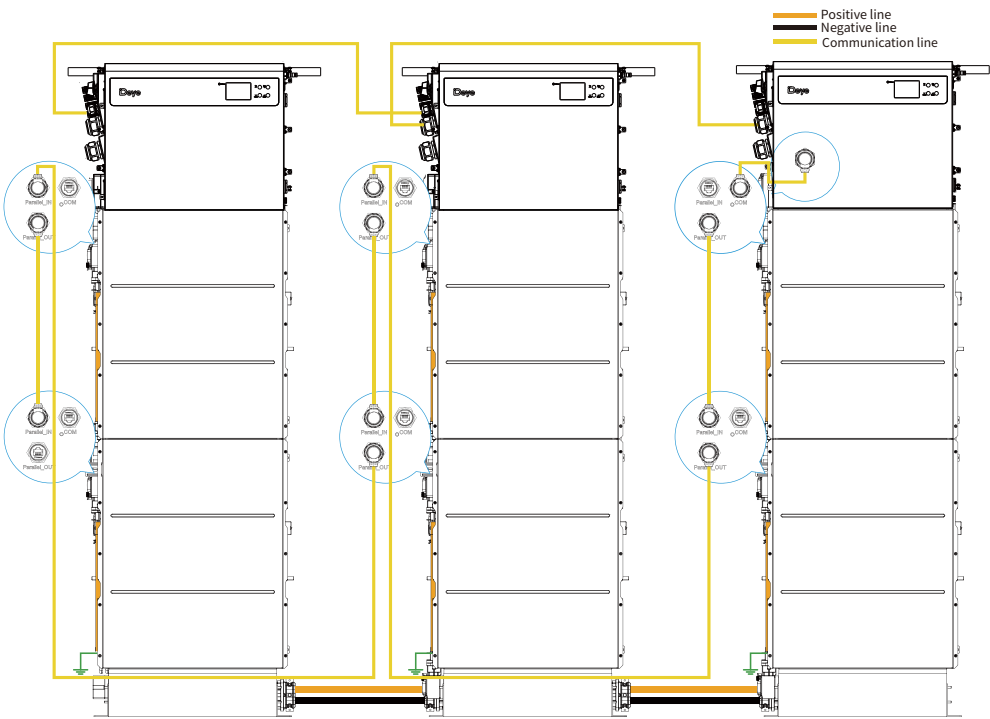


Mode 3:

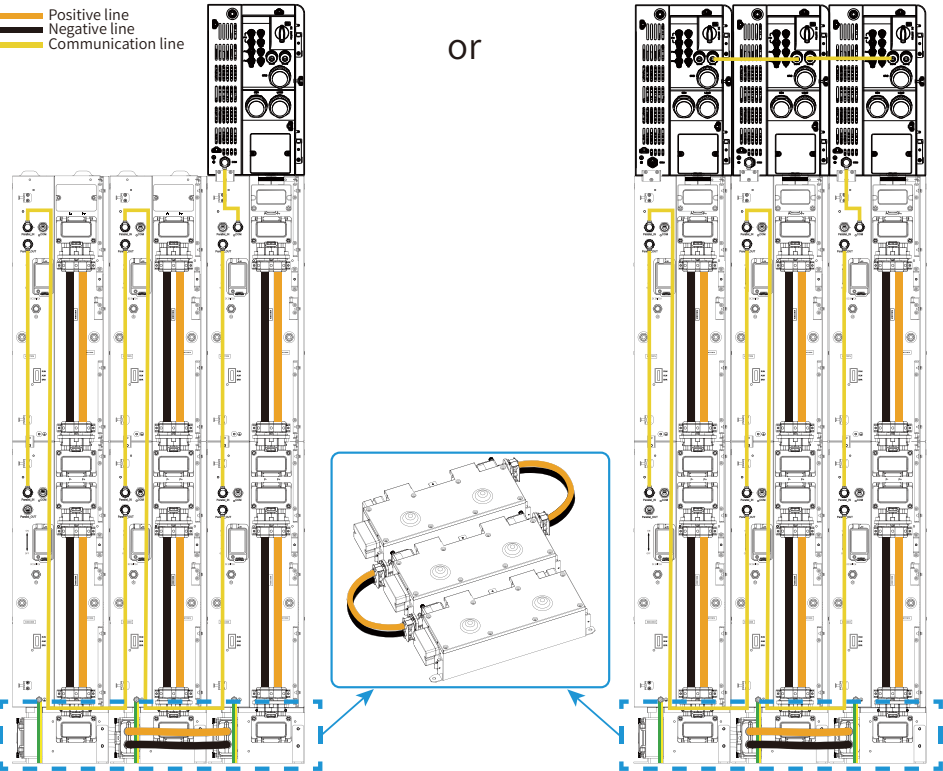


### 4.2.2.1 Power Cable

Step 1. As shown in the figure below, unscrew the 4 screws on the upper and lower protective covers, open the protective covers, and then use the 4 M10 nuts in the accessory kit to lock the copper bar onto the terminal block. Recommended torque: 24.5 N·m.

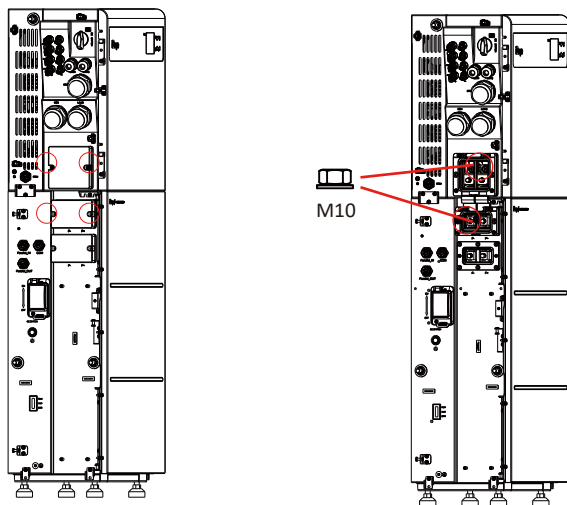


Loose the M10 nut on the P+ and P- connection points.  
Match the inverter-battery connector (inverter accessories) to corresponding terminals of inverter and battery pack.

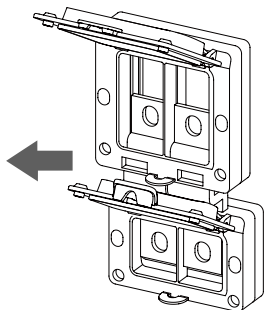

Match the battery-battery connector (battery accessories) to corresponding terminals of battery pack and battery pack.


After securing Crimp terminals/DC BUS at both ends of the connector using M10 nut, close the protective housing of the connector and fasten housing locking screws M4\*10. Recommended torque for M4\*10 bolts: 1.5 N·m; Recommended torque for M10 nuts: 24.5 N·m.

Step 2: Take out 4 M4 \* 12 screws from the accessory kit and tighten them to the 4 positions circled in the figure below. Recommended torque: 1.5 N·m .

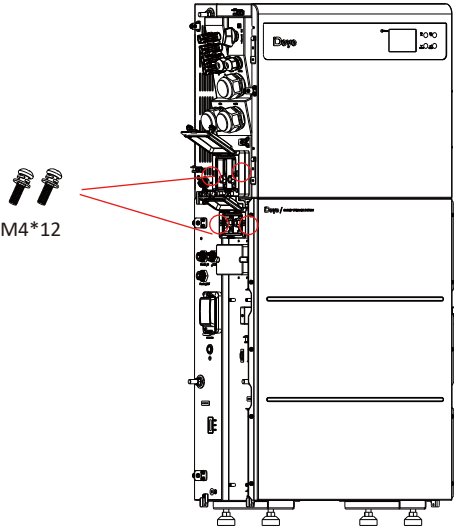

Step 3: Put on the protective cover, then tighten the 4 M4 screws built on the outer side of the cover. Recommended torque: 1.5 N·m .

Note: The screws need to be tightened with tools. Failure to tighten them will result in non-compliance with the IP66 protection level requirements.

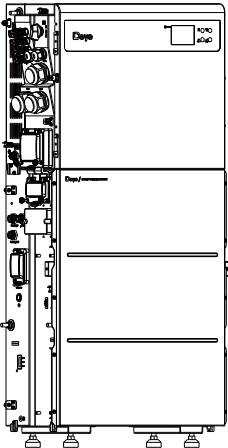

Step 4: Use the modified Battery-Battery power cable kit specified in Section 4.1.1 "Cable Preparation" to complete the installation of parallel power cables between battery packs. The installation methods and procedures are similar to the previous step. Pay attention to matching the polarity of the power cable with the polarity of the wiring terminals, and do not reverse them.


4.2.2.2 Communication Cable

Wiring method of the communication cable with waterproof end cap is as follows:

- 1. Insert the RJ45 crystal connector at one end of the communication cable into the corresponding communication port.
- 2. Use the built-in waterproof cap on the communication cable to cover the communication port, and tighten the waterproof cap clockwise to the end.

The wiring steps for battery-related communication cables are as follows:

- 1. Using the above method, connect the communication cable between the inverter and the battery bank master unit (included in the inverter package, standard length: 236mm). Use communication port number 14 on the inverter side (refer to sectio 2.3), and use communication port labeled COM on the battery pack master unit.
- 2. Using the above method, connect the parallel communication cable between the two battery packs (optional, included in the battery pack package, standard length: 755mm). Master unit: Parallel\_OUT connects to the next slave unit's Parallel\_IN in daisy chain. Slave unit: Parallel\_IN connects to the preceding unit's Parallel\_OUT; Parallel\_OUT may connect to the next unit or be left unconnected.

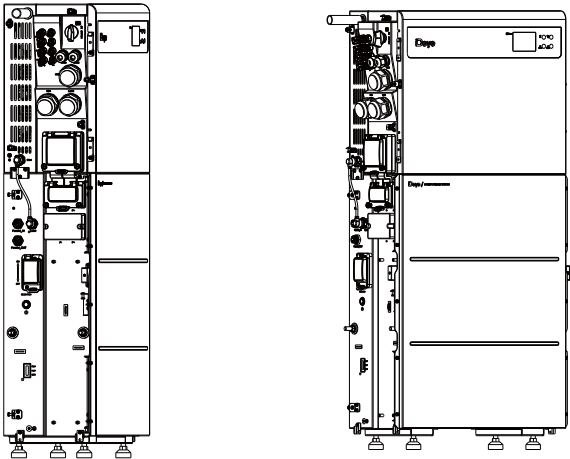

Connect the battery's COM communication port to the BMS communication port of the inverter using a communication cable.

Master unit: Parallel\_OUT connects to the next slave unit's Parallel\_IN in daisy chain.  
Slave unit: Parallel\_IN connects to the preceding unit's Parallel\_OUT; Parallel\_OUT may connect to the next unit or be left unconnected.



---

#### 4.2.2.3 Multi-System Connection

The parallel system adopts a centralized battery architecture. All battery packs in the parallel system shall be connected in parallel to form a unified battery bank, then the BMS of the master battery pack will communicate with the master inverter. A single inverter module can be connected to 1 to 6 battery packs, and the maximum number of parallel inverter modules is 3 units. Therefore, the maximum capacity of the parallel system consists of 3 inverter modules plus 18 battery packs in total. The parallel system needs to be assembled into multiple stacks, each stack can accommodate a maximum of 2 battery packs plus 1 inverter module. All stacks are connected in parallel via the optional parallel base, which supports two installation modes: Side-by-Side and Front-to-Rear. For detailed wiring procedures and wiring diagrams, please refer to the Quick Guide and User manual of the AI-W battery.

Scan the QR code below to enter the "Download Center", and enter "AI-W16" in the keyword dialog box to find the download link for the user manual of the A-W16 battery module in thesearch results, or click directly" <https://deyeess.com/downloads/###> "Repeat the above stepsto obtain the download link for the battery module user manual.



4.2.3 Grid connection and backup load connection

- Before connecting to the grid, a separate AC breaker must be installed between the inverter and the grid, and also between the backup load and the inverter. The AC circuit breaker on the grid side of the hybrid inverter provides bidirectional isolation between the grid and the inverter, which can prevent the bidirectional propagation of fault currents and facilitate safe operation and maintenance. The AC switch on the load side can independently cut off the fault load circuit to prevent local overload and short circuit from damaging the inverter and other loads.
- Please refer to the recommended specifications in sections 4.6-4.8 for the specifications of the AC breaker and comply with local regulations, all final installed AC breakers must comply with the certification requirements of AS60947.3 .
- There are three terminal blocks with "Grid" "Load" and "GEN" markings. Do not mix them up.



All wiring must be performed by a qualified personnel. It is very important for system safety and efficient operation to use appropriate cable for AC connection. Please refer to the two tables below to select cable specifications based on the installation scenario. If local regulations have other requirements for cables, please choose cable specifications according to local regulations. The factors that affect cable selection include maximum operating current, cable type, wiring mode, ambient temperature, and maximum expected line loss. The following two tables: The first table provides recommendations based on 2 times the rated output current (the inverter supplies the rated power load while charging the battery at the rated power), and the second table provides recommendations based on the bypass current (Max. continuous AC passthrough current).

Backup load (Copper wires)

| Model            | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|------------------|-----------|-------------------------|-------------------|
| 14/15/16/18/20kW | 4AWG      | 16                      | 1.2Nm             |

Crid (Copper wires) (Bypass)


| Model            | Wire Size | Cable(mm <sup>2</sup> ) | Torque value(max) |
|------------------|-----------|-------------------------|-------------------|
| 14/15/16/18/20kW | 4AWG      | 16                      | 1.2Nm             |

Chart 3-3 Recommended Size for AC wires


Please follow below steps to implement AC input/output connection:

Before making Grid, load and Gen port connection, be sure to turn off AC breakers and disconnectors first.


Step 1: Use a Phillips screwdriver to unscrew the 2 M4 screws that secure the front cover latch, pull out the latch that fastens the cover, then open the front cover outwards.

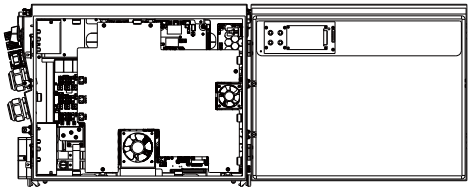

Step 2: Pass all cables that need to be routed into the inverter junction box through the openings on the Left decorative panel in the accessory kit, as shown in Pic.3.5-1. Unscrew the required sealing gland, use scissors or similar tools to cut an opening on the rubber membrane at the inlet of the sealing gland that matches the outer diameter of the cable, then route the corresponding cable through the sealing gland(as shown in Pic 3.5-2) according to the purpose marked next to it, and feed the cable into the interior of the inverter.

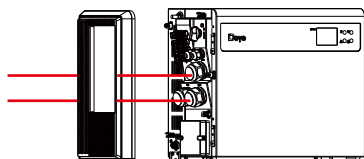


Pic 3.5-1




Pic 3.5-2

Step 3: Remove insulation sleeve 10mm length, unscrew the bolts. Thread the wires through the magnetic ring firstly, then insert these wires into the terminals according to polarities indicated on the terminal block. Tighten the terminal screws and make sure the wires are completely and safely connected.

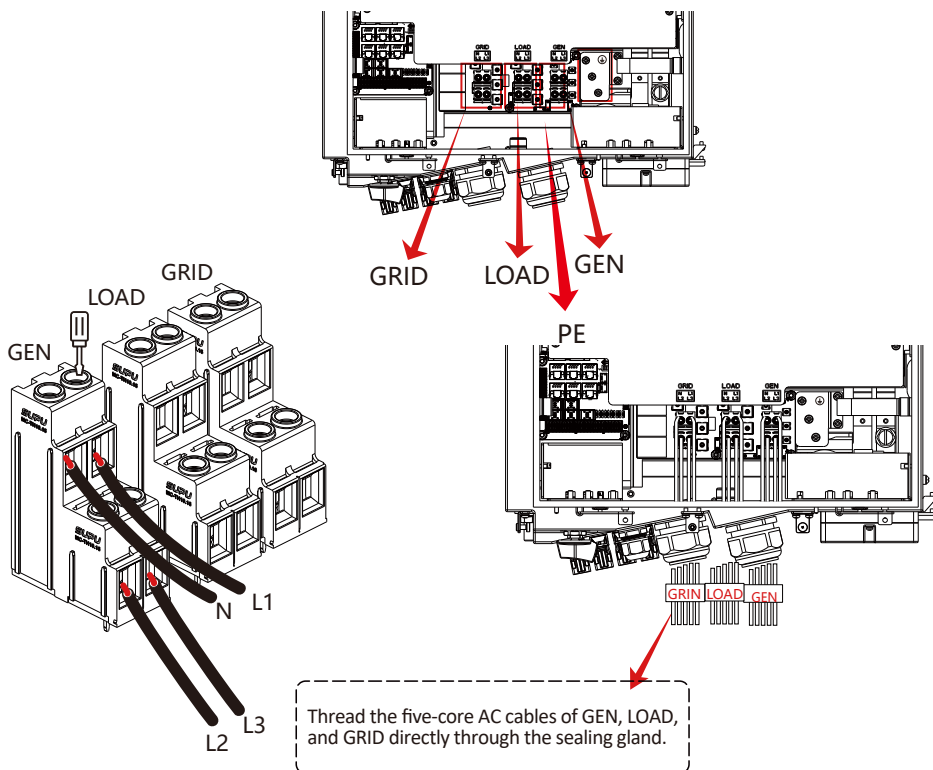


Pic 3.5-3

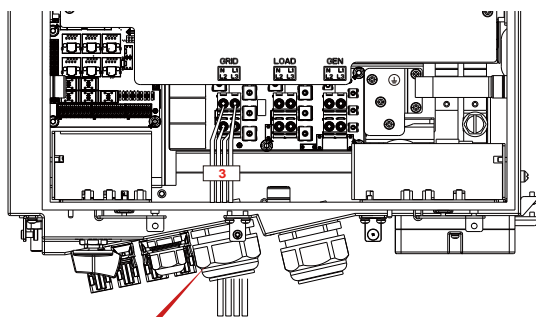

GRID

**3**

Pass the wires of the Grid port directly through the magnetic ring.

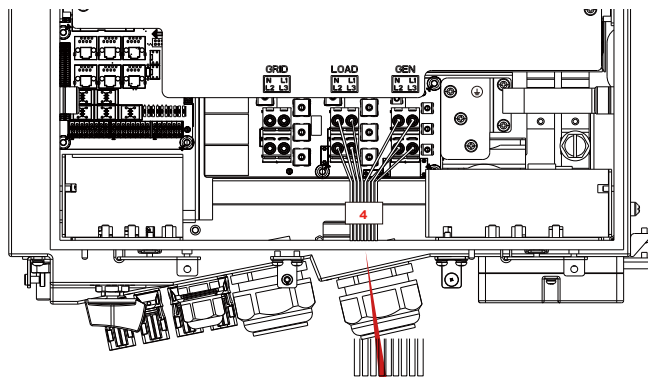

GEN

LOAD

**4**

The wires of GEN port and LOAD port shall be threaded directly through the magnetic ring without winding.



Be sure that AC power source is disconnected before attempting to wire it to the unit.

Step 4: Appliances such as air conditioners require at least 2-3 minutes to restart, as sufficient time is needed to balance the refrigerant gas within the circuit. If a power failure occurs and power is restored within a short period, it may cause damage to such appliances. To avoid this damage, please confirm with the air-conditioner manufacturer whether the unit is fitted with a time-delay function prior to installation. Otherwise, although this inverter will trigger an overload fault and cut off output to protect the appliance, internal damage to the air conditioner may still occur in some cases.

#### 4.2.4 PV Connection

The PV modules used to connected to this inverter shall be Class A rating certified according to IEC 61730.

Before connecting the photovoltaic strings to inverter, please install an independent DC circuit breaker between the inverter and the photovoltaic string. The use of appropriate cables for connecting photovoltaic strings is crucial for the safe and efficient operation of the system. To reduce the risk of personal injury and property damage, please use cables that are not lower than the recommended specifications below.

| <i>Model</i>     | <i>Wire Size</i> | <i>Cable(mm<sup>2</sup>)</i> |
|------------------|------------------|------------------------------|
| 14/15/16/18/20kW | 12AWG            | 2.5                          |

Chart 3-4 Cable size



Photovoltaic strings generate lethal high voltage when exposed to sunlight. Please comply with all safety instructions listed in the relevant documents pertaining to photovoltaic strings.



To avoid inverter failure, do not connect any photovoltaic modules that may leak electricity to the inverter. For example, PV+ and PV- grounding of solar panels can cause excessive leakage current in inverters. Therefore, when using photovoltaic modules, only the frame can be grounded, and the positive and negative poles are not allowed to be grounded.



Please install surge protection devices between the inverter and the photovoltaic array, otherwise lightning strikes may cause damage to the inverter.



Before connecting the photovoltaic array to the inverter, ensure its good insulation to the ground.

Before connecting the photovoltaic connectors to the corresponding terminals on the inverter, confirm that the polarity of the photovoltaic string is correct.



During the installation and operation of the inverter, always ensure that neither the positive nor the negative pole of the photovoltaic string is short-circuited to the ground. Otherwise, AC or DC short circuit may occur, resulting in equipment damage. Such damage is not covered under the warranty.



If the DC connector is loosely connected, arcing or contactor overheating may occur, and the resulting losses are not covered under the warranty.



If the DC input cables are connected with reversed polarity, or the positive and negative terminals of different MPPTs are simultaneously short-circuited to the ground while the DC switch is in the "ON" state, do not operate immediately, otherwise the inverter may be damaged. Switch the DC switch to the "OFF" position, and make sure the current in the PV string is below 0.5A before you can remove the DC connector and adjust the polarity of the PV string.



Only use the DC connectors supplied with the product for DC cable connections. Using incompatible DC connectors may lead to serious consequences, and the resulting damage is not covered under the warranty.



Do not connect one PV string to multiple inverters. Otherwise, the inverters may be damaged.

#### 4.2.4.1 PV Module Selection:

##### NOTICE

Mixing different brands or models of photovoltaic modules in the same MPPT circuit, or placing photovoltaic modules with different orientations or inclinations in the same string, may not damage the inverter, but it can lead to poor system performance!

The following requirements regarding photovoltaic string connection must be met. Otherwise, it may cause irreversible damage to the inverter and is not covered by the warranty.

When selecting proper PV modules, please be sure to consider below parameters:

- 1) Open circuit Voltage (Voc) of PV strings not exceeds Max.PV Input Voltage clarified in inverter's datasheet, and the Voc of PV strings should not less than the Start-up Voltage of inverter.
- 2) Short circuit current (Isc) of PV modules should not exceed Max.Input Short-Circuit Current clarified in inverter's datasheet.
- 3) It is recommended to use PV modules whose Maximum Power Current (Imp) does not exceed the inverter's Max. Operating PV Input Current. Modules with a larger Imp can also be used, but this will cause waste, and the actual output power of the module will not able to reach its peak power(Wp).

| ESS Model                      | 14K     | 15K | 16K | 18K | 20K |
|--------------------------------|---------|-----|-----|-----|-----|
| PV Input Voltage Range(V)      | 160-800 |     |     |     |     |
| Rated PV Input Voltage(V)      | 550     |     |     |     |     |
| MPPT Voltage Range(V)          | 160-650 |     |     |     |     |
| No. of MPP Trackers            | 3       |     |     |     |     |
| No. of Strings per MPP Tracker | 3/2+1+1 |     |     |     |     |

Chart 3-5


### 4.2.4.2 PV string wiring

- 1. Switch the Grid Supply Main Switch(AC)OFF.
- 2. Switch the DC Isolator OFF.
- 3. Follow the steps below to assemble PV input connector to the inverter.




**Note:**

This inverter complies with IEC 62109-2 clause 13.9 for earth fault alarm monitoring. If an Earth Fault Alarm occurs,the inverter will disconnect from the grid and will report an error F04 on its LCD. At the same time, the buzzer will sound. If the inverter is equipped with a data logger which has been properly configured, the alarm information will be uploaded to the cloud server, and this alarm can be monitored through the website or the mobile APP.




Pic 3.1 DC+ male connector



Pic 3.2 DC- female connector

The steps to assemble the DC connectors are listed as follows:  
a)Strip off the DC wire about 7mm, disassemble the connector cap nut (see pic 3.3) and pass the positive and negative PV cables through the cap nut of the DC connector.

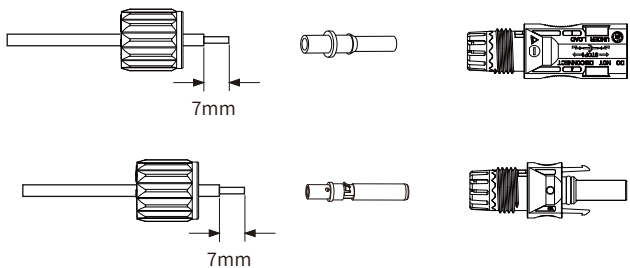


Pic 3.3 Disassemble the connector cap nut

b) According to the polarity of the DC cable, use hydraulic pliers to crimp the metal pins inside the DC connector onto the conductors at the end of the DC cable, as shown in picture 3.4.




Pic 3.4 Crimp the contact pin to the wire

c) Insert the crimped metal pin into the insulator part of the DC connector until it snaps into place. Gently pull the cable backward to ensure firm connection. Tighten the cap nut and the insulator part with the Connector Special Spanner inside the accessory kit.

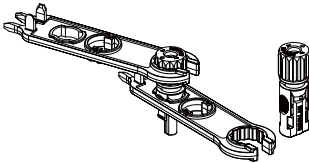

Pic 3.5 connector with cap nut screwed on


d) Finally insert the DC connector into the positive and negative input of the inverter, as shown in picture 3.6.

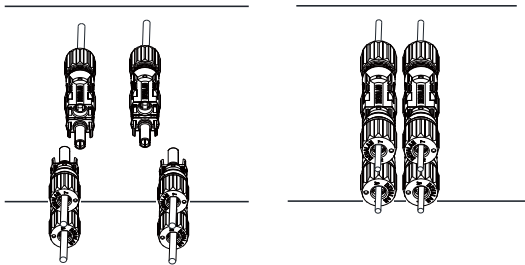

Pic 3.6 DC input connection



During installation and maintenance, if it is necessary to disconnect the installed PV strings from the inverter, first turn off the DC breaker between the PV strings and the inverter, as well as the DC switch on the inverter, to ensure that the DC connector is free of voltage. Then use the Solar Photovoltaic Connector Special Spanner from the inverter accessory kit to separate the male and female ends of the DC connector in the manner shown in the figure below.

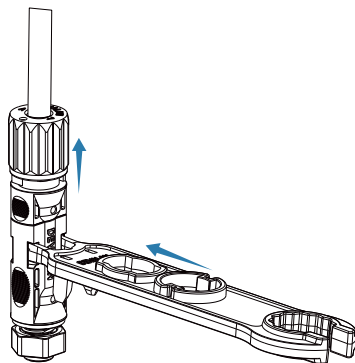

**Warning:**

Photovoltaic strings will generate high voltage under sunlight, which can pose a threat to personal safety. Therefore, before connecting or disassembling DC connectors, opaque materials should be used to cover the photovoltaic panel, and the DC switch should be placed in the "OFF" state.


Notice: Suggest purchasing smart meters through official channels. For meters purchased from third-party channels, even with identical specifications and models, communication mismatch issues may still occur. The inverter supplier reserves the right not to provide technical support services for after-sales problems caused by such issues.

#### 4.2.5.1 CT Connection

The diagram illustrates the CT connection for a three-phase inverter system. It shows the following components and connections:

- Grid:** A power source represented by a transmission tower at the bottom left, providing three-phase power (L1, L2, L3) and a neutral line (N).
- CTs (Current Transformers):** Three CTs (CT1, CT2, CT3) are connected to the L1, L2, and L3 lines, respectively. An inset shows a CT with an arrow pointing to the inverter.
- AC Breaker:** A three-phase AC breaker is connected to the CTs and the inverter.
- Grounding:** A green line represents the ground connection, which is connected to the inverter and the AC breaker.
- Wiring:** The diagram shows the internal wiring of the inverter, including the CT connections and the AC breaker. A detailed inset shows the CT connection to the inverter, with labels for "White wire" and "Black wire" and a sequence of numbers (3, 4, 5, 6, 7, 8).
- Home Load:** A house icon represents the home load, connected to the AC breaker and the grid.

- 34 -


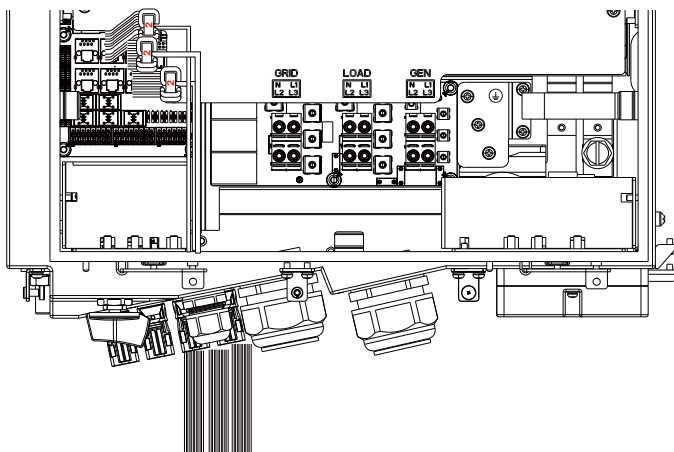


| No. | Function Port                                   | Installation Instructions                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|-----|-------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2   | CT_1 (3,4)<br>CT_2 (5,6)<br>CT_3 (7,8)          | <p>1. The lead wires of the CT shall pass through the sealing gland marked COM (No.9 in Section 2.3.1). For the specific method, refer to Pic 3.5-1.</p> <p>2. Pass the two CT lead wires through the magnetic ring for one full turn, then route them to the CT (7,8) terminals of the Function port (refer to Section 2.4). Use a flat screwdriver to complete the installation following the installation steps of the Screwless Spring Clamp Terminal Block below.</p> |
| 2   | G_start (1,2)<br>G_valve (3,4)<br>Grid_Ry (5,6) | Wrap the wires three laps around the magnetic ring, then thread the end of wires through the magnetic ring.                                                                                                                                                                                                                                                                                                                                                                |
| 2   | RSD (7+,8-)<br>RSD_input (B,B,+,-)              | Wrap the wires three laps around the magnetic ring, then thread the end of wires through the magnetic ring.                                                                                                                                                                                                                                                                                                                                                                |



Installation steps of the Screwless Spring Clamp Terminal Block :



1. Insert a flat screwdriver into the designated operating slot to press down the internal spring clip.
2. The conductor insertion port will be fully opened after the spring is compressed.
3. Insert the pre-stripped fine stranded or solid conductor into the terminal port to the full depth.
4. Release the flat screwdriver slowly, the spring clip will automatically clamp the conductor firmly against the conductive bar.
5. Gently pull the conductor to confirm that it is reliably locked without looseness.



4.2.5.2 Connection of meter without CT

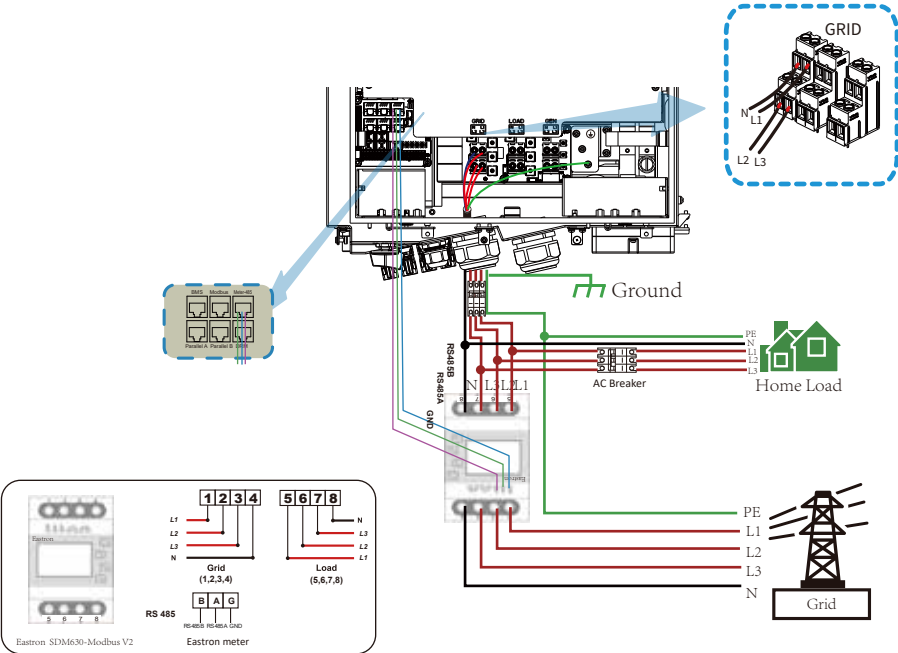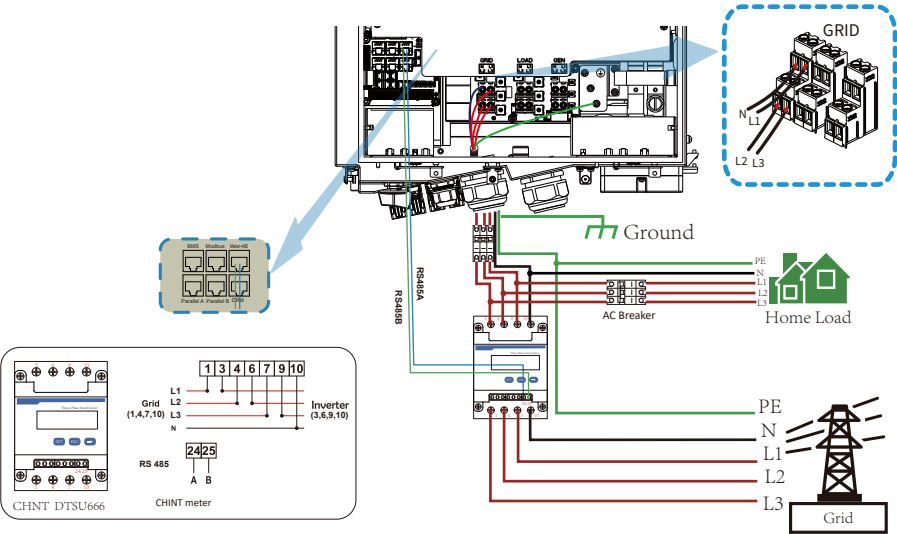

### 4.2.5.3 Connection of meter with CT

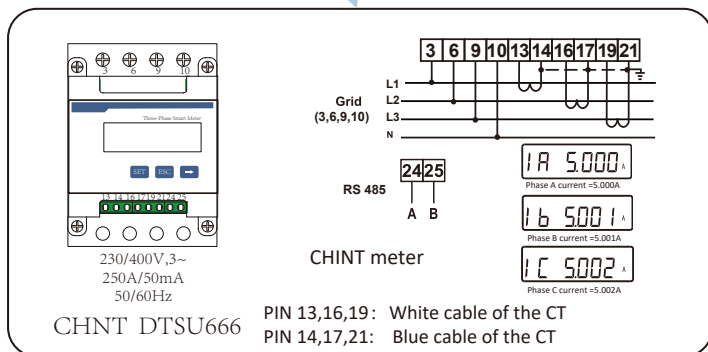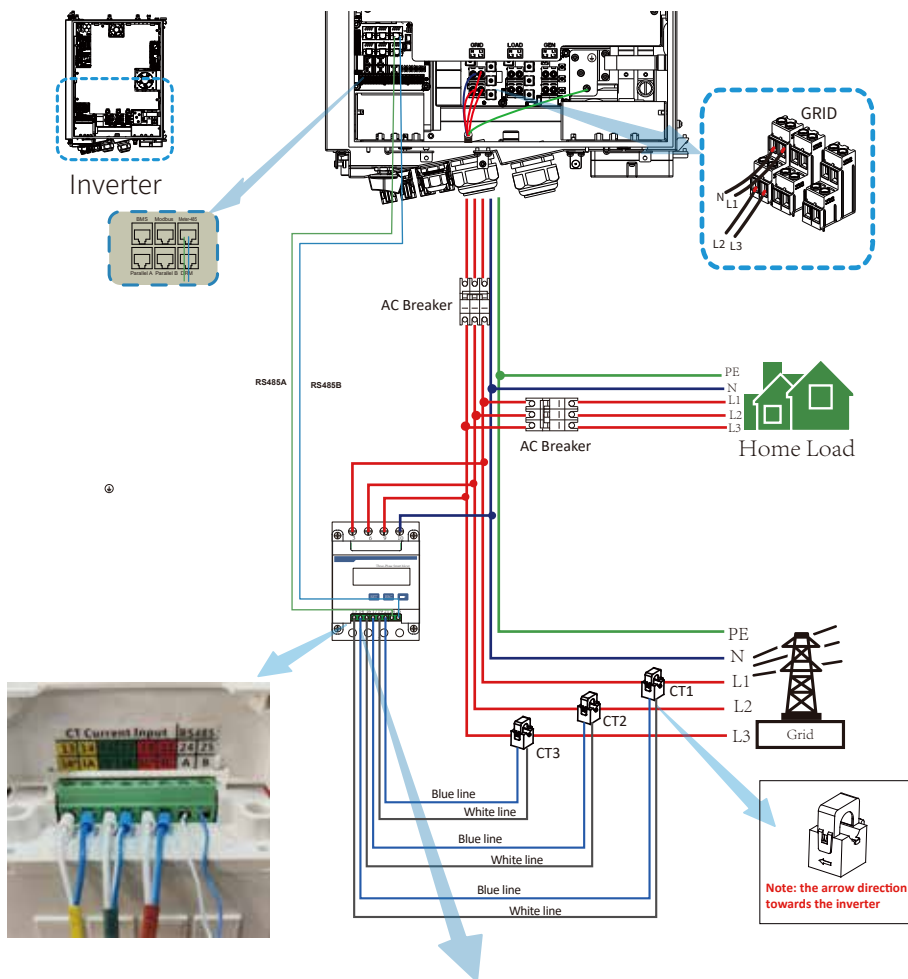

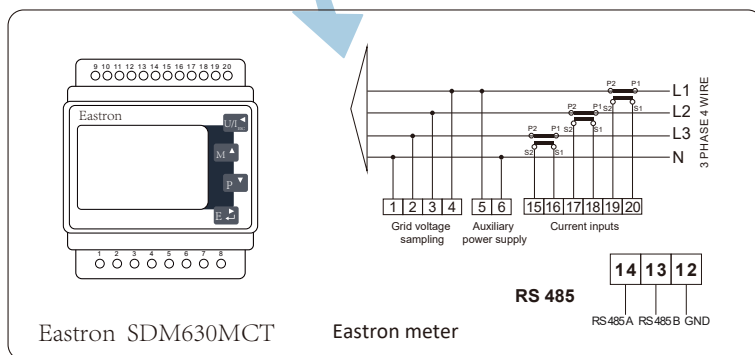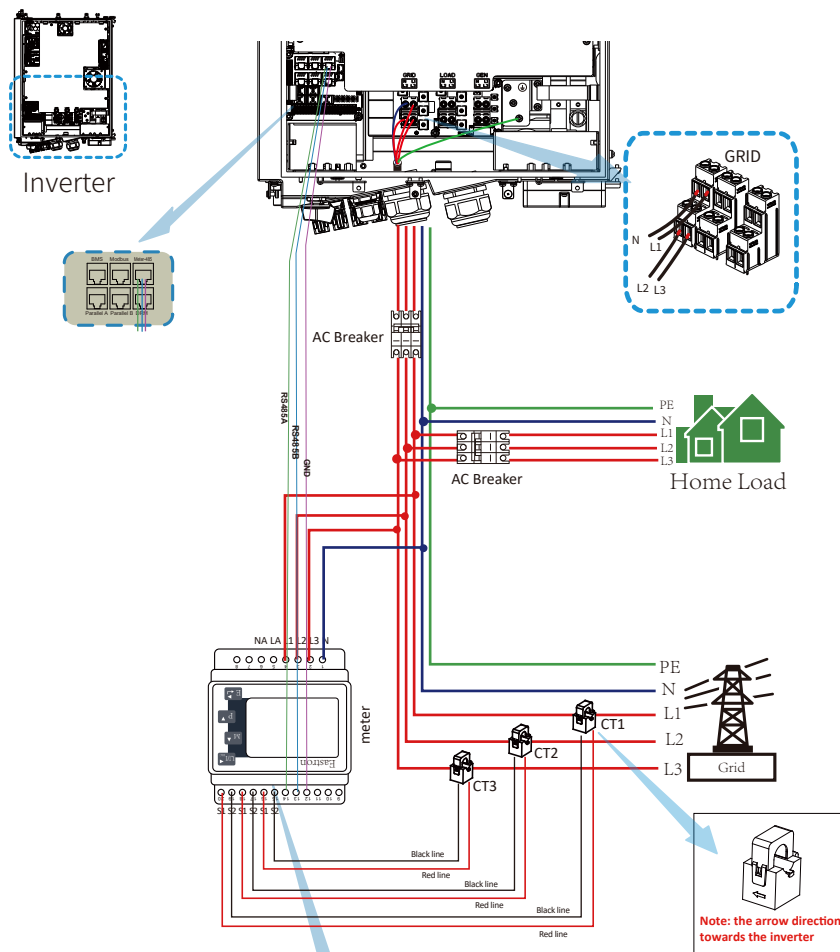

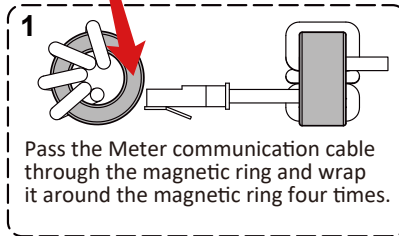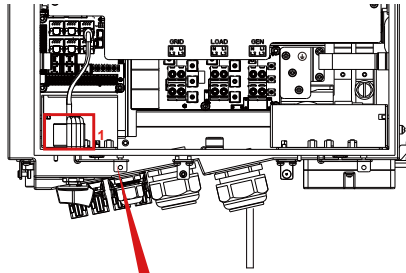


#### 4.2.6 DRM connection

"DE": Ripple Control Receiver (RCR)



In Germany, the grid company uses the Ripple Control Receiver to convert the grid dispatching signal and send it as a dry contact signal. The inverter can control power output according to the local preset instructions as shown below.

RCR

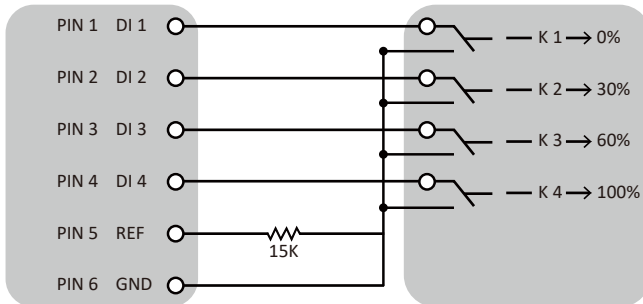


Inverter

RCR

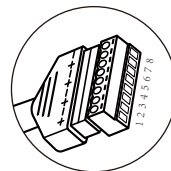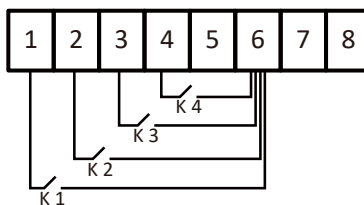


### 4.3 Post-Wiring Operations

Step 1: After completing the wiring, close the front cover and press it firmly into place (this operation is recommended to be completed by multiple people working together). Then push the latch pin of the buckle into the slot, use a Phillips screwdriver and the previously removed M4 screws to fasten the buckle, with a recommended torque of 1.5 N·m .

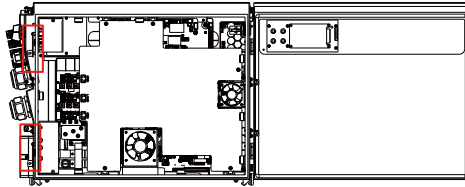


Step 2: Align the 4 elastic cantilever snap claws on the inner side of the Left decorative panel with the 4 cylindrical snap positioning bosses on the inverter module housing, push the Left decorative panel inward until all 4 snap positioning bosses are fully engaged into the 4 elastic cantilever snap claws, to complete the installation of the Left decorative panel. Follow the same operation procedure to fix the Right decorative panel to the right side of the inverter module.

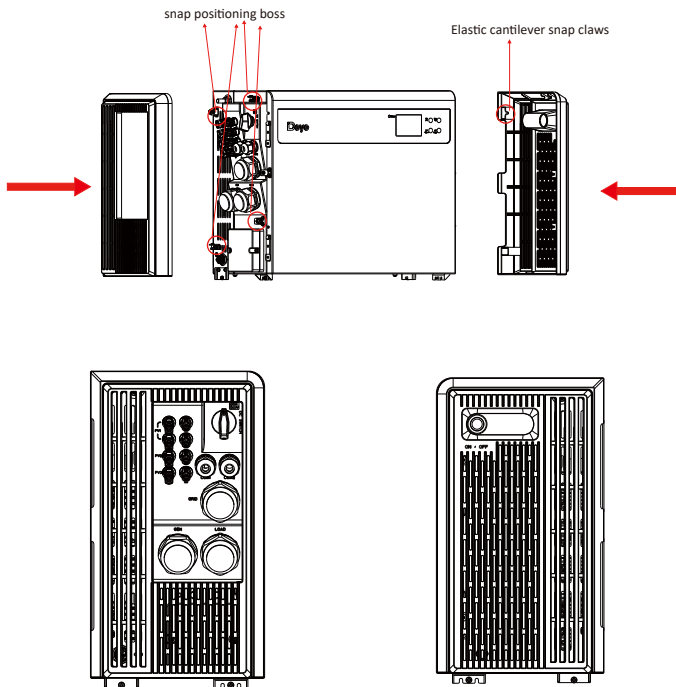




#### 4.4 Wiring System for Inverter

**TIN-C-S:** The incoming cable from the transformer has only 3L + PEN conductors. The PEN conductor can be split into independent N conductor and PE conductor inside the main distribution panel (Commonly seen in countries such as Australia).

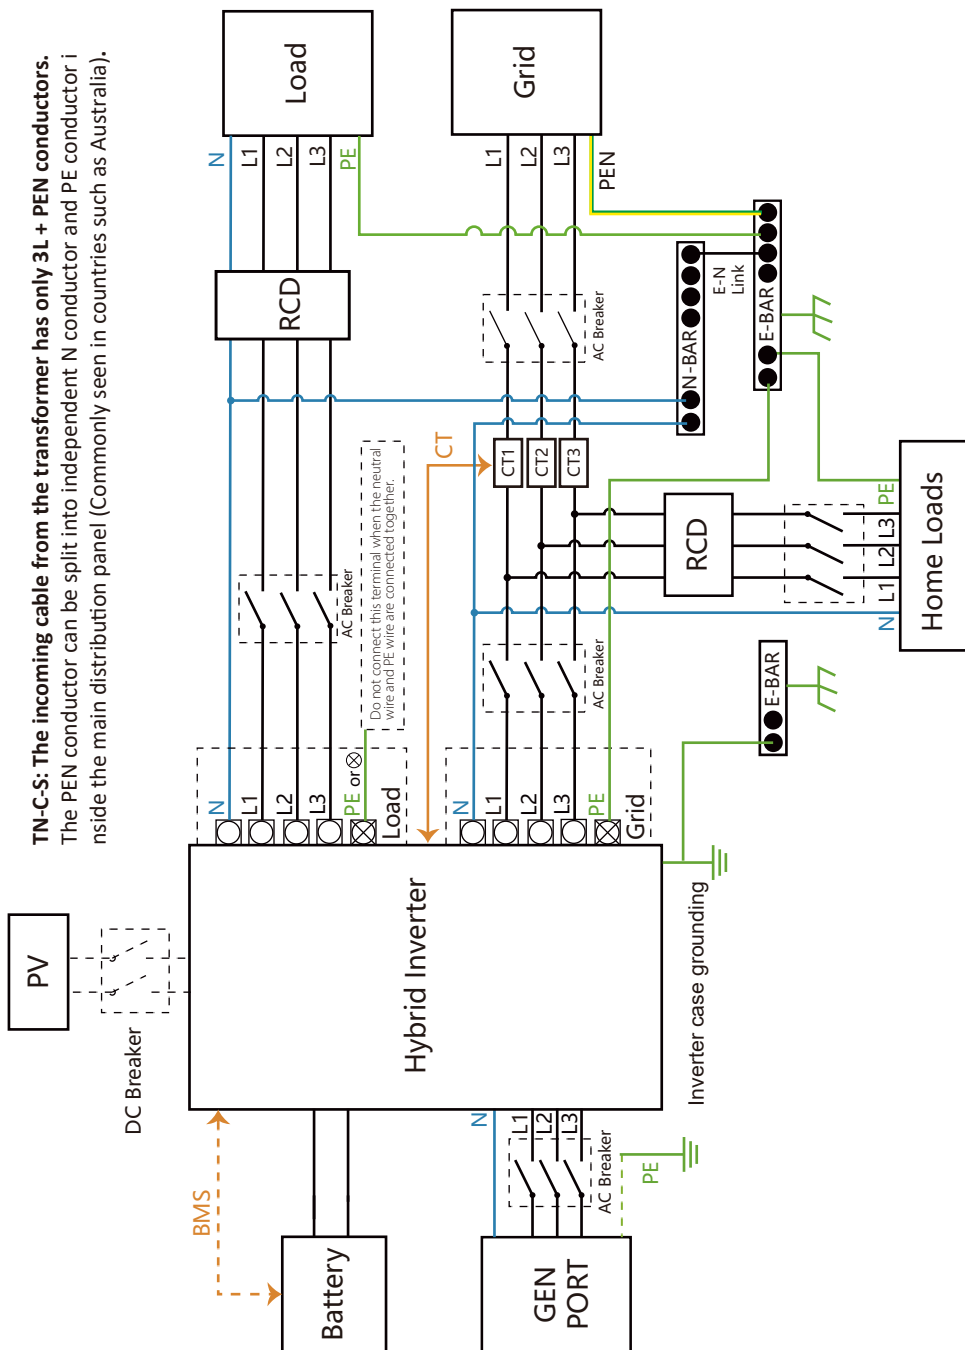


### 4.5 Wiring diagram with neutral line ungrounded

This diagram is an example for an application in which neutral is separated from the PE in the distribution box.

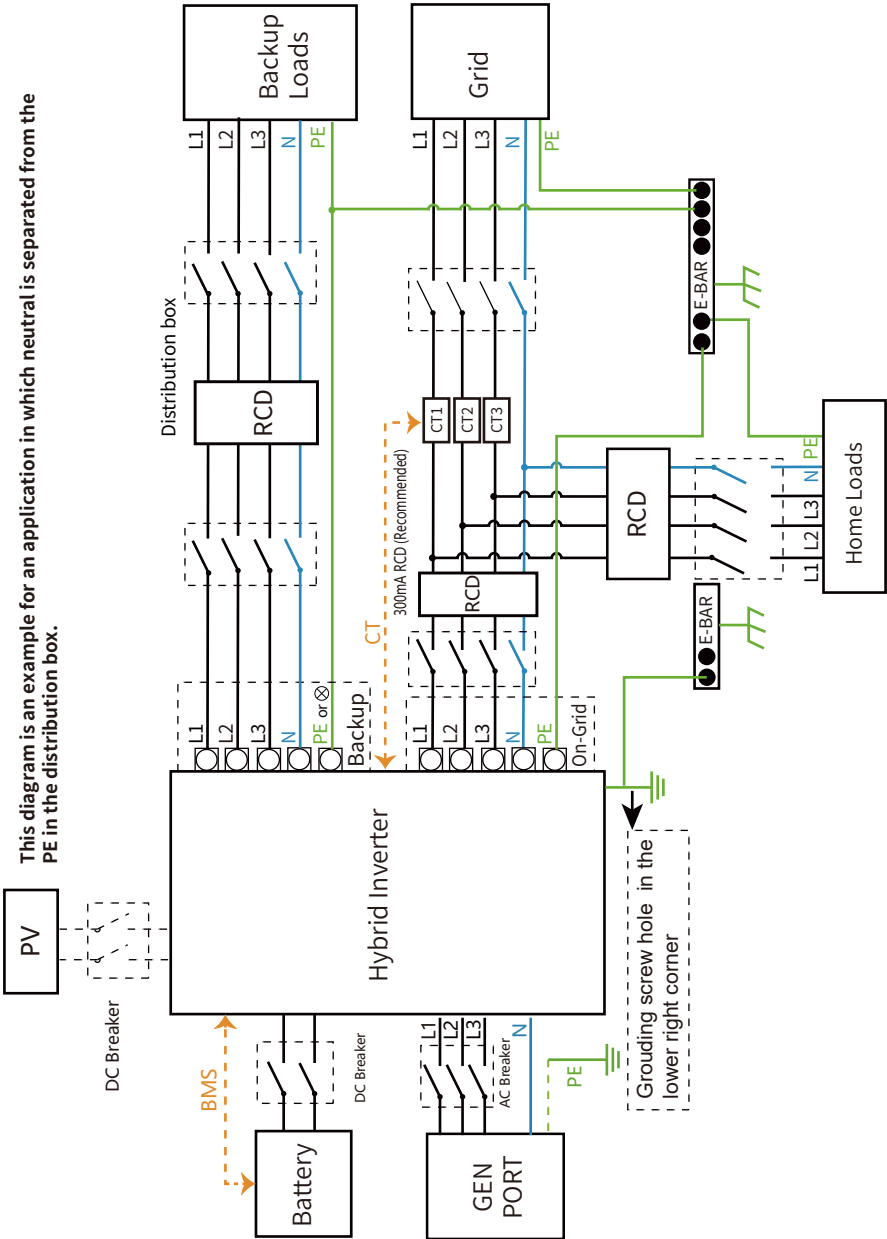

#### 4.6 Wiring Diagram for Single Unit Grid-Tied Partial Backup Power System

— CAN — L wire — N wire — PE wire

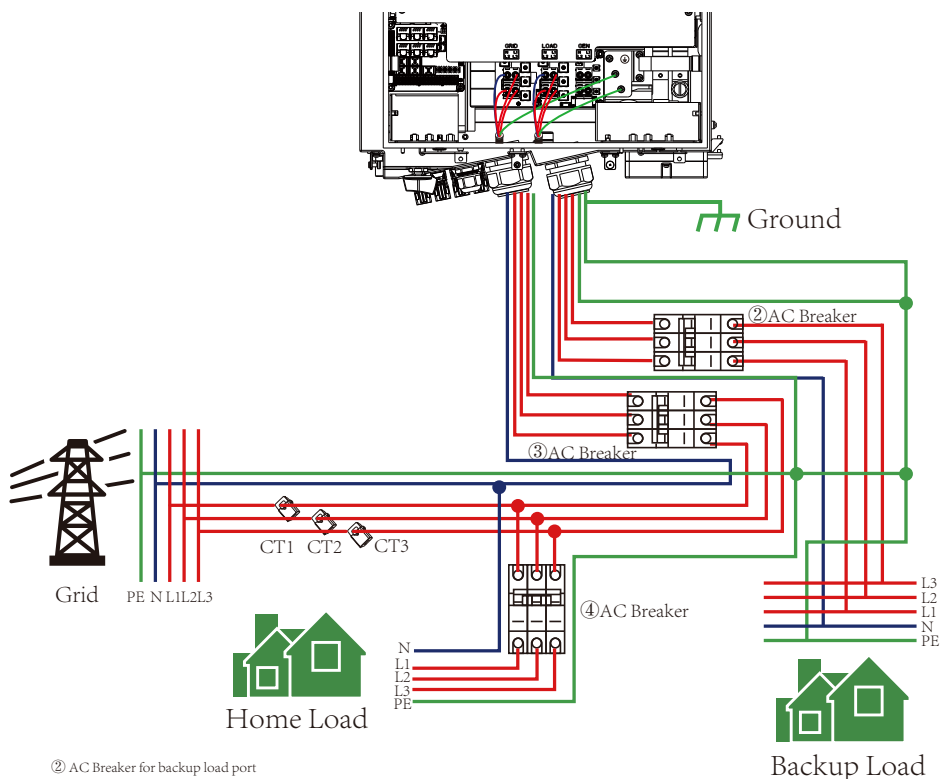

② AC Breaker for backup load port

SUN-14K-SG05LP3-EU-TM3: 100A AC breaker

SUN-15K-SG05LP3-EU-TM3: 100A AC breaker

SUN-16K-SG05LP3-EU-TM3; 100A AC breaker

SUN-18K-SG05LP3-EU-TM3: 100A AC breaker

SUN-20K-SG05LP3-EU-TM3: 100A AC breaker

③ AC Breaker for backup Grid port

SUN-14K-SG05LP3-EU-TM3: 100A AC breaker

SUN-15K-SG05LP3-EU-TM3: 100A AC breaker

SUN-16K-SG05LP3-EU-TM3: 100A AC breaker


SUN-18K-SG05LP3-EU-TM3: 100A AC breaker

SUN-20K-SG05LP3-EU-TM3: 100A AC breaker

**Note:** The AC breaker specification is recommended based on the Max. AC passthrough current of 70A. If the actual maximum operating current does not reach 70A, the AC breaker can be selected according to the actual maximum operating current on site. This provision also applies to Section 4.8.


# 4.7 Typical Wiring Diagram for Off-Grid Generator Connection

CAN      L wire      N wire      PE wire

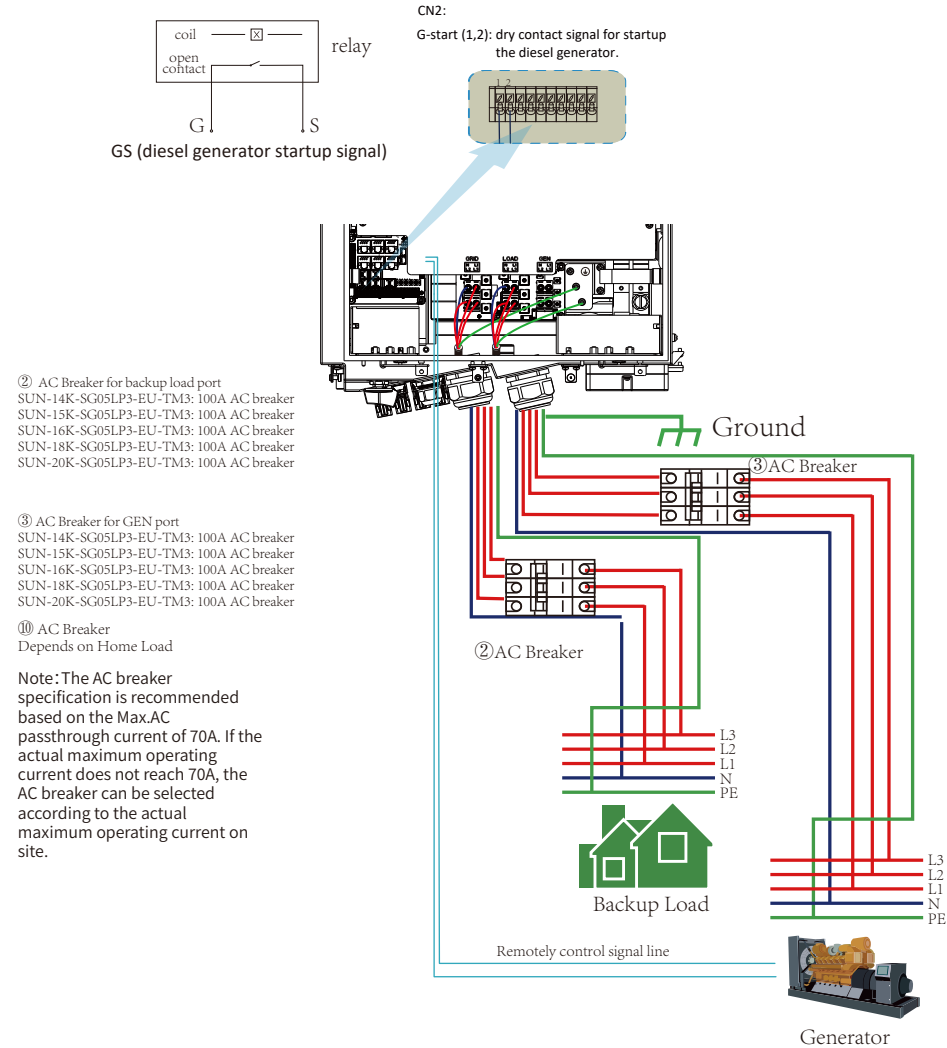

# 4.8 Typical Wiring Diagram for parallel system

Note: For the parallel system, please choose the "Zero export to CT " mode.

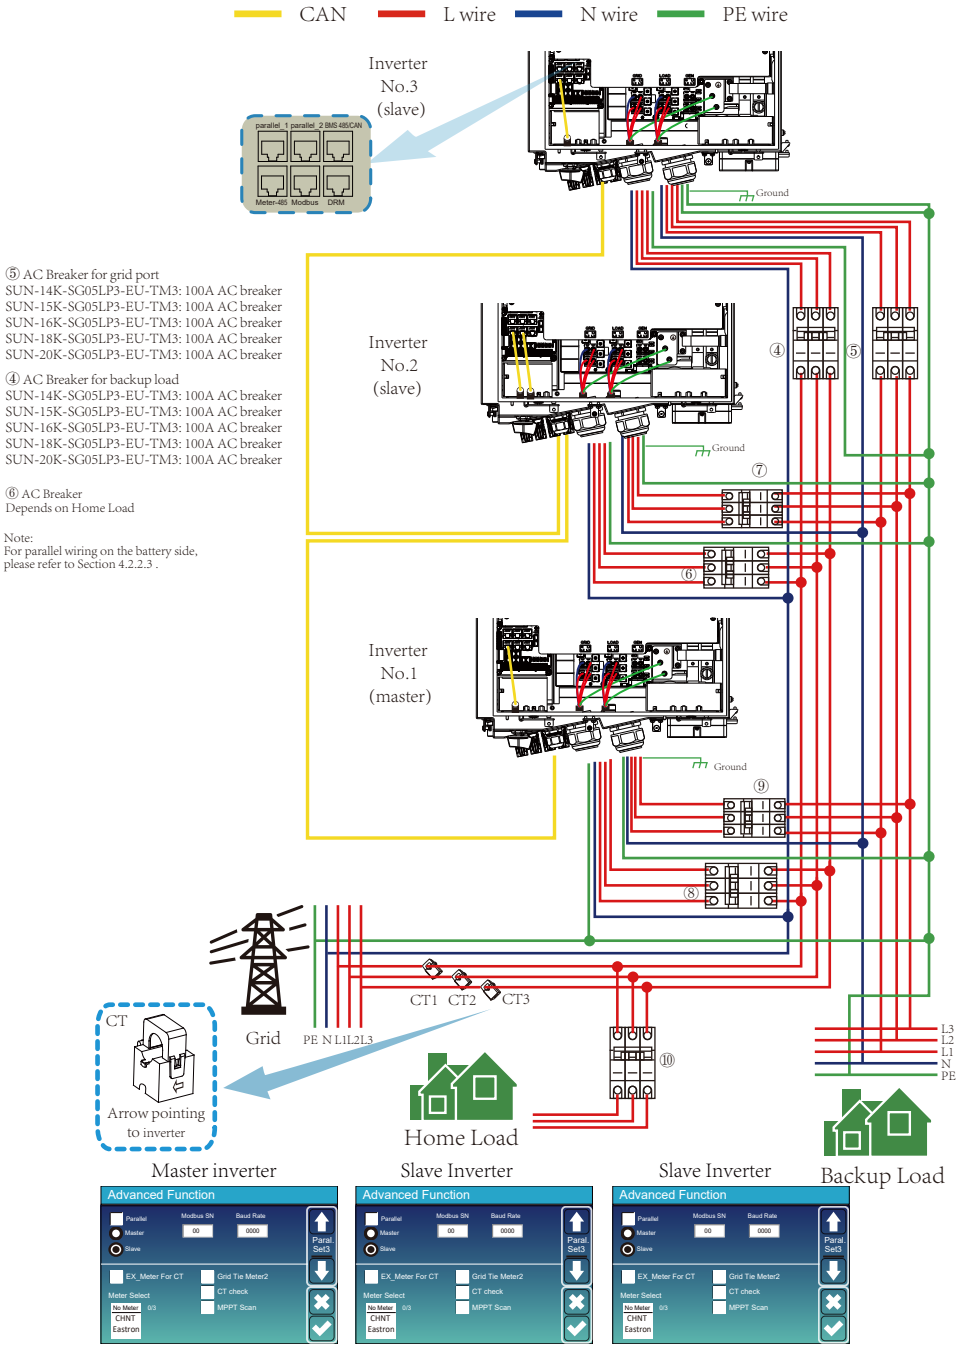

## 5 Monitoring platform

### 5.1 Introduction of logger module

The inverter is equipped with a built-in data logger module that supports 4G or Wi-Fi communication(optional), so it has remote monitoring function.

Specification of WiFi module:

Frequency range: 2.412GHz-2.472GHz

Module maximum transmitting power: 13.67dBm

Antenna: External Antenna

Antenna Gain: 4.4dBi


Specification of 4G module:

Frequency range: FDD-LTE:B1, B3, B5, B8 TDD-LTE:B34, B38, B39, B40, B41

Module maximum transmitting power: LTE: +23dBm  $\pm$ 2dBm

Antenna: External Antenna

Antenna Gain: Low Band  $\geq$ -8.8dBi High Band  $\geq$ -19.3dBi

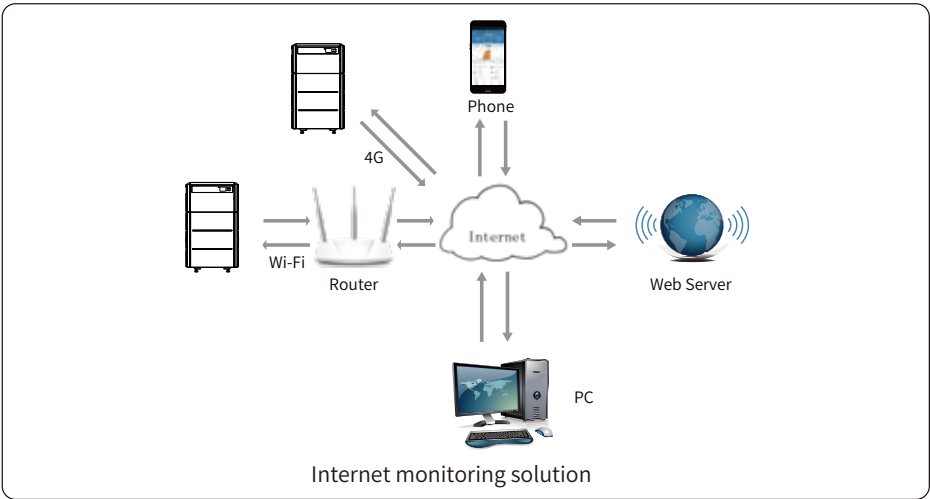

### 5.2 Methods to use platform

If you choose the built-in Wi Fi module for this inverter, you need to refer to section 5.3 and 5.5 for network configuration. If you choose the built-in 4G module, you can ignore the Wi-Fi network configuration related content.

Web monitoring address: <https://deyecloud.com>

For mobile phone monitoring system, scan the QR code below to download the APP.

Also you can find it by searching “deye cloud” in App store or Google Play store.

The second QR code is WiFi configuration guide of data logger ,you can follow the manual to add logger to your local network.

The third QR code is Deye cloud user manual ,you can follow the manual to monitor your inverter.



To download Deye cloud ; WiFi configuration guide; User manual of Deye cloud;


5.3 How to connect the inverter to the router via web

- 1. Turn on the wireless network of your PC or smartphone.
  - 2. Connect your smartphone or PC to the wireless AP network of the inverter.
- If there' s a label that includes PWD: XXXXXXXX on the inverter casing then the password of AP network is the "XXXXXXX" : for example, the default password of AP network is "5c4db4d8" of the inverter SN:2302202012.



In addition, the password for the wireless AP network of the inverter can be reset. If you forget the updated password, please contact the Deye service team.

- 3. Open the browser on your smartphone or PC and enter 10.10.100.254 in the URL address bar, then enter the default username and password "admin" to enter the localhost of the inverter wireless AP network.

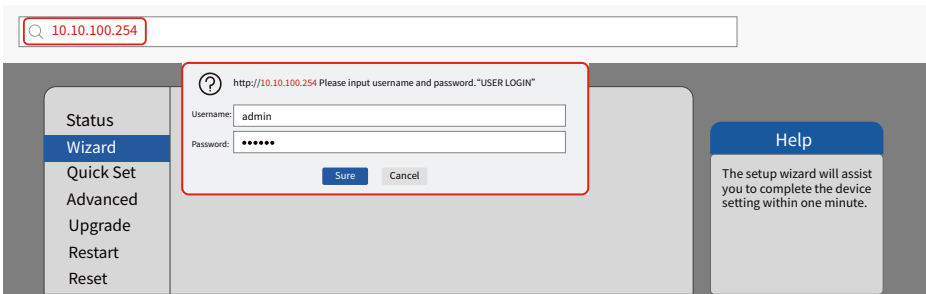

4. Browser jumps to “Status” page, the basic information is listed there.

Status

Wizard

Quick Set

Advanced

Upgrade

Restart

Reset

Inverter information

Inverter serial number

---

Firmware version(main)

---

Firmware version(slave)

---

Inverter model

---

Rated power

--- W

Current power

--- W

Yield today

--- kWh

Current power

--- kWh

Alerts

---

Last updated

---

Device information

Device serial number

3907047089

Firmware version

LSW3\_14\_FFFF\_1.0.23

Wireless AP mode

Enable

SSID

AP\_1704013242

IP address

10.10.100.254

MAC address

8C:D8:B3:71:8D:B0

Wireless STA mode

Disable

Router SSID

Signal Quality

IP address

MAC address

Remote server information

Remote server A

Not connected

Remote server B

Not connected

Help

The device can be used as a wireless access point(AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.

Status of remote server

• Not connected: Connection to server failed last time. If under such status, please check the issues as follows: (1)check the device information to see whether IP address is obtained or not; (2)check if the router is connected to internet or not; (3)check if a firewall is set on the router or not;

• Connected: connection to server successful last time;

• Unknown: No connection to server.Please check again in 5 minutes.

5. Turn to "Wizard" page, click "Refresh" icon to search the usable wireless network, then select the target 2.4G wireless network and click "Next" icon.

Status

Wizard

Quick Set

Advanced

Upgrade

Restart

Reset

Please select your current wireless network:

☒ IE-2.4G-TEST

54:A7:3:70:99:13

82

1

☐ 0-BE:D5:20:B8:2C

80

1

☐ AP\_1753738492

30:EA:E7:36:B:36

78

2

☐ IGEN\_office\_2.4G

0-BE:D5:20:B8:2C

76

1

☐ IGENTEST

E8:65:D4:F2:15:B8

74

6

☐ 90:5D:7C:97:95:29

74

1

☐ IGEN\_office\_2.4G

90:5D:7C:97:95:27

72

1

☐ 90:5D:7C:97:C9:E5

72

1

☐ AP\_1719065936

30:EA:E7:36:CF:B2

70

1

☐ IGEN\_office\_2.4G

90:5D:7C:97:C9:E3

70

1

☐ TESR\*?=?;

4A:E:EC:9E:C3:3E

70

11

☐ IGEN\_office\_2.4G

0-BE:D5:20:B7:EE

66

11

☐ 80:00:00:00:00:00

66

11

• Note: When RSSI of the selected WiFi network is lower than 15%, the connection may be unstable, please select other available network or shorten the distance between the device and router.

Refresh

Add wireless network manually:

Network name (SSID)  
(Note:case sensitive)

IE-2.4G-TEST

Encryption method

WPA2PSK

Encryption algorithm

AES

Next

1

2

3

4

Help

The setup wizard will assist you to complete the device setting within one minute.



6. Enter the password of the target wireless network of you router and click "Next" icon.

Status

Wizard

Quick Set

Advanced

Upgrade

Restart

Reset

Please fill in the following information:

Password(8-64 bytes)  
(Note: case sensitive)

••••••••

☐ Show Password

Obtain an IP address automatically

Enable ▾

IP address

Subnet mask

Gateway address

DNS server address

Back

Next

1

2

3

4

Help

Most systems support the function of DHCP to obtain IP address automatically. Please select disable and add it manually if your router does not support such function.

7. Users can enable any options below to enhance the security of the wireless AP network of the inverter and then click "Next" icon.

Status

Wizard

Quick Set

Advanced

Upgrade

Restart

Reset

Enhance Security

You can enhance your system security by choosing the following methods

Hide AP

☐

Change the encryption mode for AP

☐

Change the user name and password for Web server

☐

Back

Next

1

2

3


4

Help


Change the encryption mode for AP  
If you set password for the AP network, you will need to enter the password to connect to AP.

Change the user name and password for Web server  
If you change the username and password for the web server, you will need to enter the new username and password to get access to the setting page.

8. If the setup is successful, the following page will pop up and click "OK" icon to reboot the inverter.

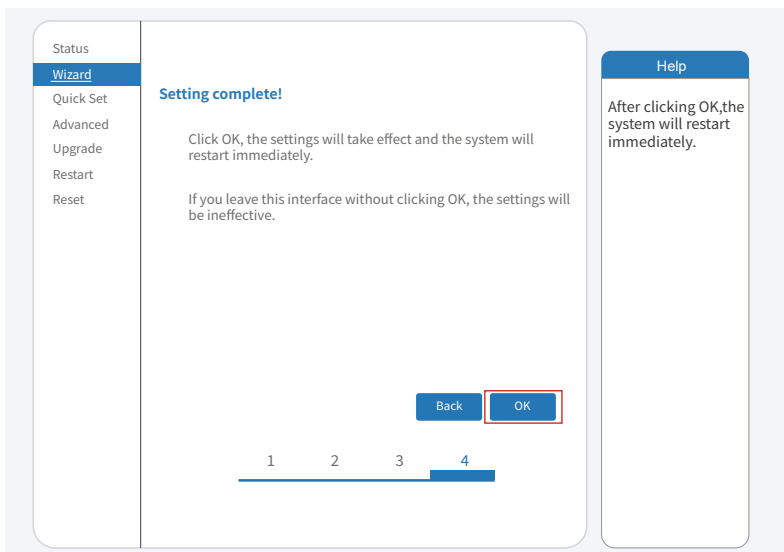

9. Connect your smartphone or PC to the wireless AP network of inverter again after rebooting, then log in to 10.10.100.254 by Browser, and check the system info of "Status" page. After the network setting is done, the remote server A or B should be "connected".

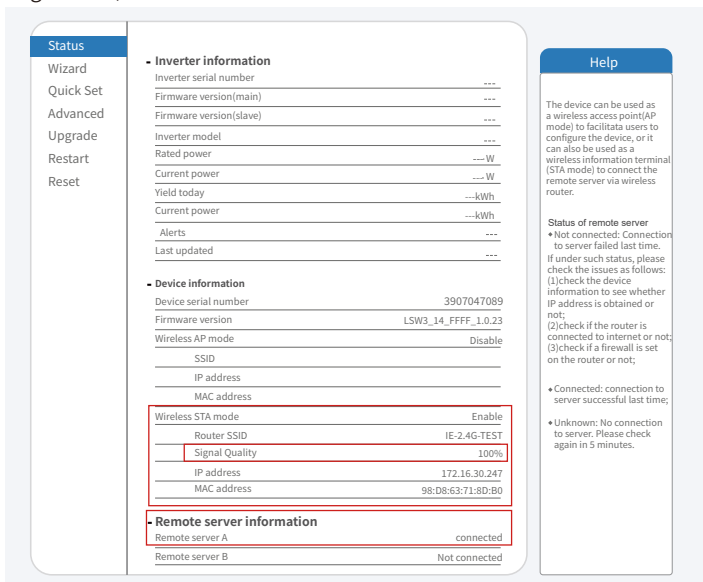

10. When "Connected" is displayed, it indicates that the inverter has been successfully connected to the Solarman cloud platform. Generally speaking, inverters will be online within 10-15 minutes after the first successful configuration.


## 5.4 USER MANUAL for Deye Cloud APP

Please make sure Bluetooth and WiFi are ON and the router can connect to the internet normally.

### 1 Registration

Go to Deye Cloud App and register.


Click **“Register Account”** and create your account here.

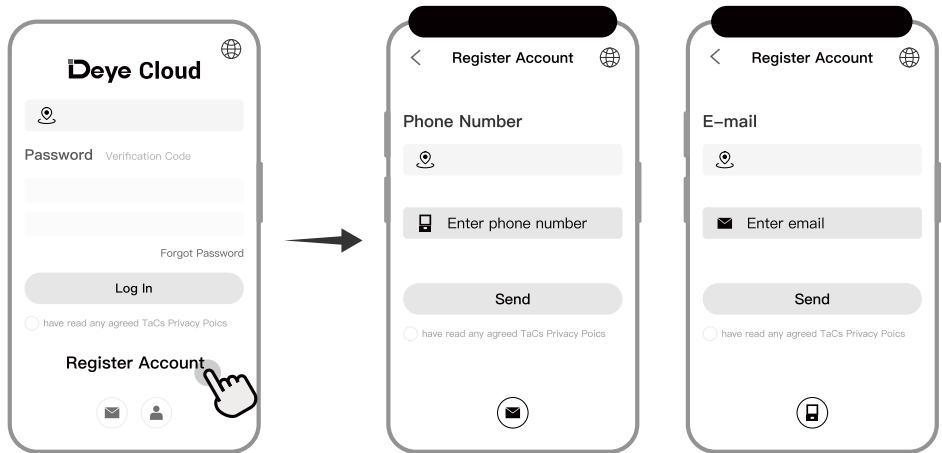

### 2 Create a Plant


1. Click **“Create a Plant”** to create your plant.

2. Please fill in plant info here.

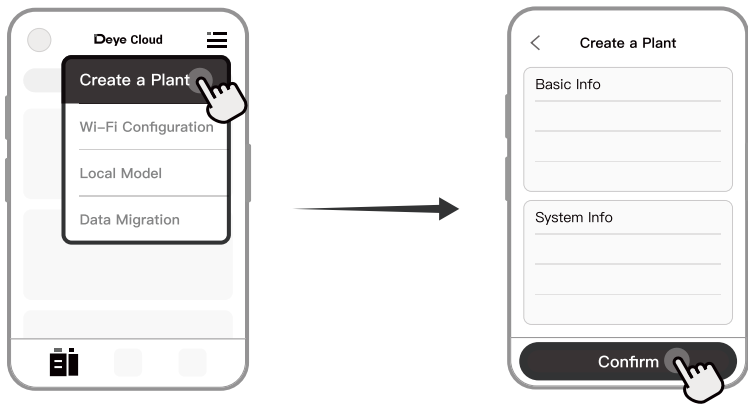


### 3 Add a Logger


1. Choose a Plant.

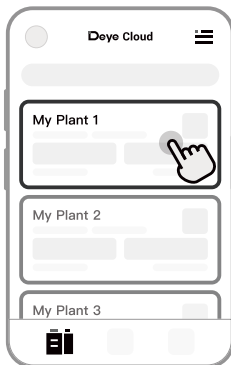

2. Go to “Device” page and Click on “Add a Logger” .

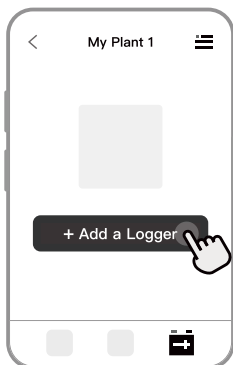

3. Scan QR code of the logger, which can be found on the logger body.

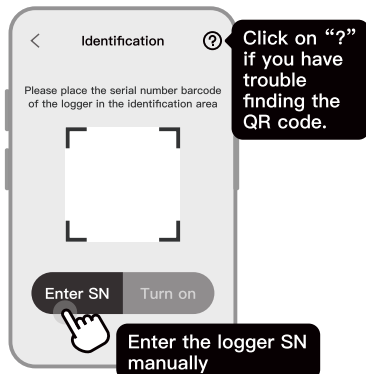

5.5 USE APP to Configure WiFi

- 1. Click “Wi-Fi Configuration” to set the network.(Please make sure Bluetooth and WiFi are ON.)
- 2.Please wait for a few minutes. Then select “Data Logger SN” and connect 2.4G WiFi.



## 6. OPERATION

### 6.1 Power ON/OFF

#### Inspection Before Startup

- Check the following items before starting the inverter:
- .All equipment has been reliably installed.
  - .The ground cable is properly and reliably connected.
  - .The AC cable is properly and reliably connected.
  - .The DC cable is properly and reliably connected.
  - .The communication cable is properly and reliably connected.
  - .The unused terminals are sealed.

#### Power on

1. First close the DC Breaker on the left side of the battery module, then press the ON/OFF button on the left side of the battery module. Wait for the battery to complete a 30~60 seconds self-check, confirm that the LED Indicator on the left side of the battery module is in normal status (green flashing). For parallel systems, perform this operation on all battery modules.
  2. Press the ON/OFF power button on the left side of the hybrid inverter module to complete the connection of the power supply link between the inverter and the battery.
  3. Close the DC Breaker (if any) between the hybrid inverter and the PV strings, then rotate the DC Switch on the left side of the hybrid inverter module to connect the PV strings.
  4. First close the AC circuit breaker on the inverter side, then close the grid input switch and the local load output switch in sequence. Wait for the inverter to automatically complete the startup self-check, and the startup process of the entire system is completed.
- Observe the LED indicator to ensure that the inverter operates normally.

### 6.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes one status indicator, four function keys and a LCD display, indicating the operating status and input/output power information.

| <i>LED Indicator</i> | <i>Messages</i>           |
|----------------------|---------------------------|
| Red led solid light  | Malfunction               |
| Blue led solid light | Inverter operating normal |
| No light emission    | Not powered on or warning |

Chart 4-1 LED indicator


| <i>Function Key</i> | <i>Description</i>          |
|---------------------|-----------------------------|
| Esc                 | To exit setting mode        |
| Up                  | To go to previous selection |
| Down                | To go to next selection     |
| Enter               | To confirm the selection    |

Chart 4-2 Function Buttons

## 7. Local monitoring via LCD

### 7.1 Main Screen

The LCD is touchscreen, below screen shows the overall information of the inverter.

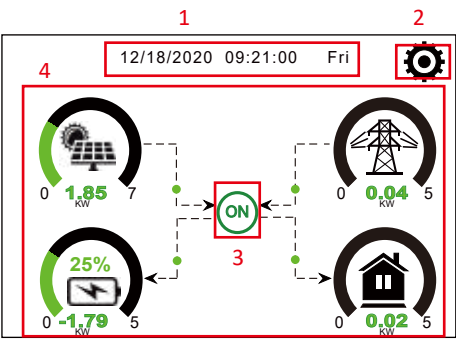


| No.  | Name             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Date&Time        | Shows system date and time.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 2    | Settings         | Enter into the system setup screen which including Basic Setup, Battery Setup, Grid Setup, System Work Mode, Generator port use, Advanced function, Device info and Smart Devices.                                                                                                                                                                                                                                                                      |
| 3, 4 | Power Flow Chart | <p>① Displays Solar, Grid, Load and Battery.</p> <p>② Arrows indicate the direction of energy flow.</p> <p>③ The panel color shifts from green to red as power rises to high level, showing system info</p> <p>④ The icon(ON) in the center indicates work normal ;if it turn into "comm./FXX",it means some errors ,and the error message will be displayed under the icon(More detail error information and solutions can be found in Chapter 9.)</p> |

Note:

Under normal conditions, the PV power and load power are always positive values or zero. A negative grid power value indicates selling electricity to the grid, while a positive value indicates purchasing electricity from the grid.

A negative battery power value indicates charging, while a positive value indicates discharging.

7.1.1 LCD operation flow chart

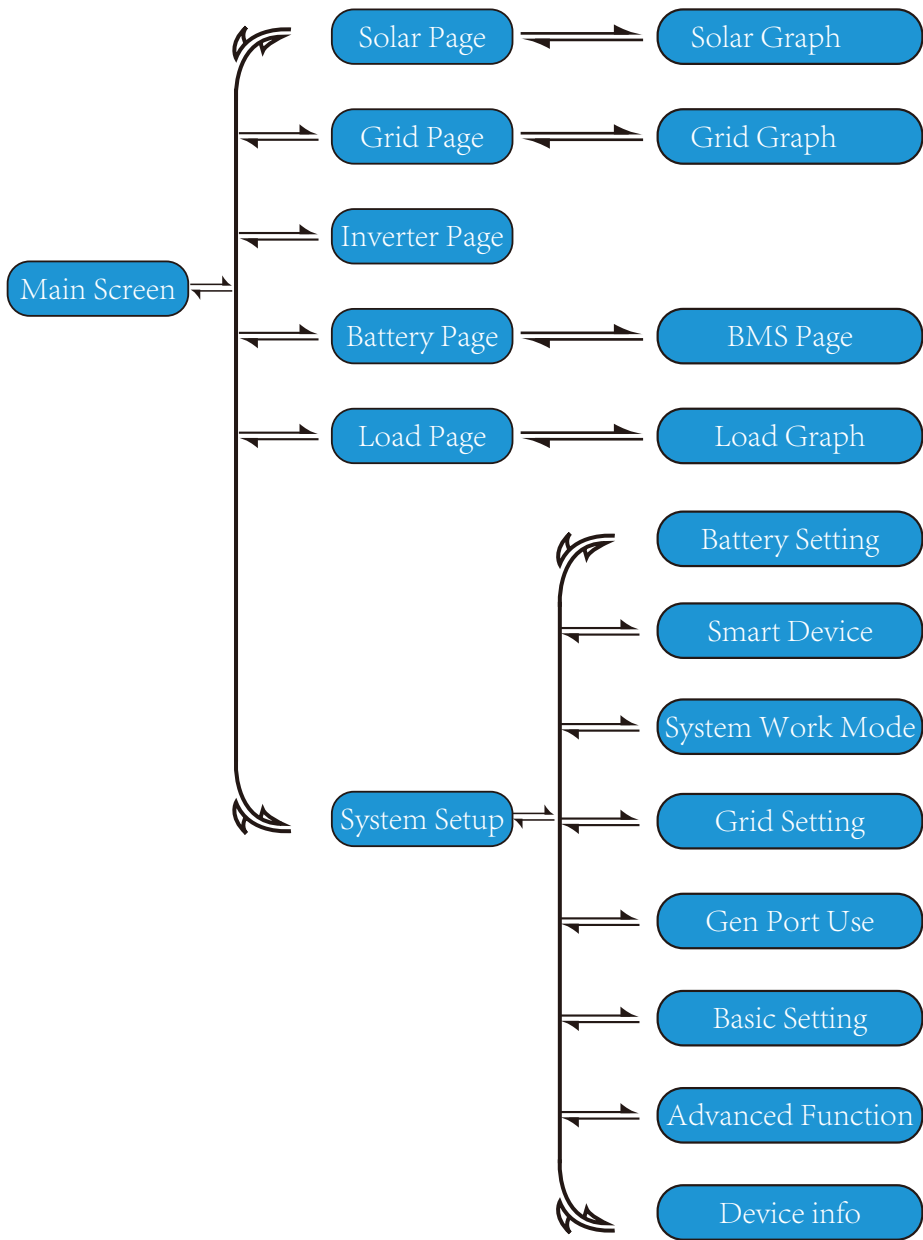



7.2 Detail pages

Click the corresponding icons on the main screen of LCD display, you can enter the detail pages of "Solar", "Inverter", "Load", "Grid" and "Batt".

Solar

PV1-V: 0V

PV2-V: 0V

PV3-V: 0V

PV1-I: 0.0A

PV2-I: 0.0A

PV3-I: 0.0A

PV1-P: 0W

PV2-P: 0W

PV3-P: 0W

Power: 1560W

Today=8.0 KWH

Total =12.00 KWH

Energy

This is Solar Panel detail page.

- 1 PV output power.
- 2 Input DC Voltage,Current and Power of each MPP Tracker.
- 3 Daily PV Generation and Total Cumulative PV Generation.

Press the "Energy "button will enter into the power curve page.

70W

231V

230V

228V

25W

23W

22W

86W

SOC:60%

BAT\_V:52.68 V

1.30 A/0.20 A

25.0 C

0W

0V

0V

0V

HM:

0W

0W

0W

0.0A

0.0A

0.0A

LD:

0W

0W

0W

70W

229V

229V

229V

INV\_P:

25W

23W

22W

50.0Hz

0.1A

0.1A

0.1A

AC\_T:

37.6C

Grid

Inverter

M1:0.00kW/ 0V/0.0A

M2:0.00kW/ 0V/0.0A

M3:0.00kW/ 0V/0.0A

Battery

PV

- 1 (Load) : Daily PV Generation and Total Cumulative PV Generation.
- 2 (Grid): The total output/input power, frequency, output voltage & current of each phase on Grid port.  
HM: The output/input power of each phase on Grid connection point based on external CT/Meter sampling data.  
LD: The output/input power of each phase on Grid port based on internal sampling data.
- 3 (DC/AC Inverter module): output/input power, frequency. The output/input voltage,current, and power of DC/AC inverter module's each phase. AC\_T:The sampling data of internal temperature sensor.
- 4 (Battery): The charging/discharging power , State of Charge, battery voltage , battery charging/ discharging current, battery temperature. When operating in "Lithium" mode, the battery BMS transmits charging/discharging power and battery temperature data via communication, while the remaining operational parameters are acquired through the hybrid inverter's built-in sampling circuitry.
- 5 (PV): The output Power,Voltage and Current of each MPP Tracker.

Load

Power: 55W

Today=0.5 KWH

Total =1.60 KWH

L1: 220V

L2: 220V

L3: 220V

P1: 19W

P2: 18W

P3: 18W


Energy

This is Load detail page.

- 1 Load Power.
- 2 Voltage, Power of load port's each phase
- 3 Daily and total Load consumption .

When you check "Selling First" or "Zero export to Load" on system work mode page, the information on this page is about backup load which connect on Load port of hybrid inverter.  
When you check "Zero export to CT"on system work mode page, the information on this page is including backup load and home load.


Press the "Energy " button will enter into the power curve page.

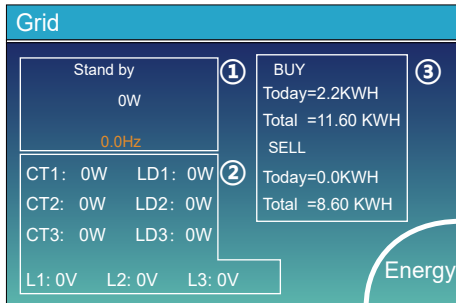

#### This is Grid detail page.

- ① Status, Power, Frequency of main grid power.
- ② L: Voltage of each Phase  
CT: Power detected by the external current sensors/meter  
LD: Power detected using internal sampling circuit on Grid port side.
- ③ BUY: Energy from Grid to Inverter,  
SELL: Energy from Inverter to grid.



Press the "Energy " button will enter into the power curve page.

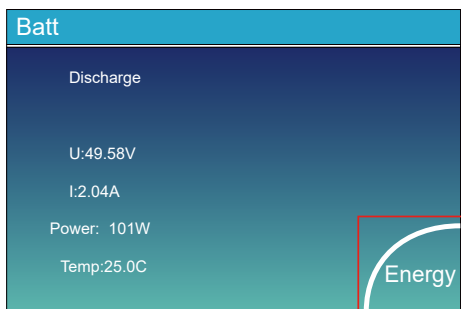



This is Battery detail page.

if you use Lithium Battery, you can enter BMS page.

**Request Force Charge:** When the battery SOC drops to a certain threshold, the BMS will send an instruction to the inverter to force it to charge the battery, so as to prevent the battery from over-discharging.

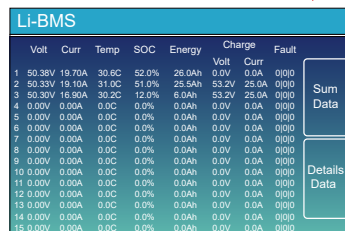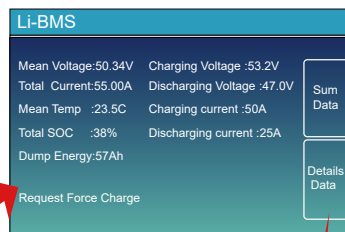

## 7.3 Curve Page-Solar & Load & Grid

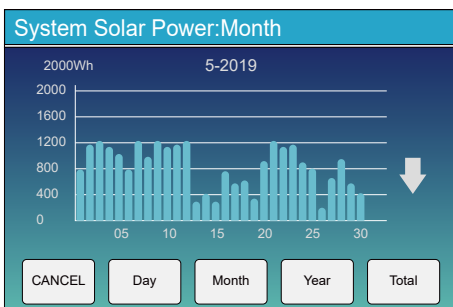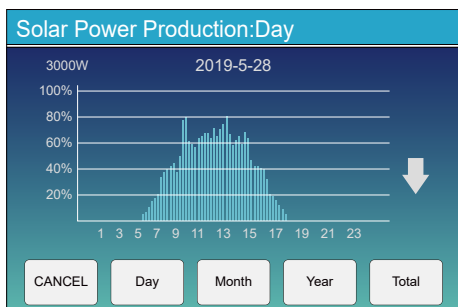



**PassWord**

X--X--X--X DEL

|        |   |    |
|--------|---|----|
| 1      | 2 | 3  |
| 4      | 5 | 6  |
| 7      | 8 | 9  |
| CANCEL | 0 | OK |

System selfchek: After ticking this item, it needs input the password, please confirm the specific password information with the supplier's technical support team.

**Basic Setting**

Language Select

Polish

Pack Version: 1004

Basic Set2

↑

↓

✕

✓

1. Click the down arrow on the left side of the "Basic Set1" page to enter the "Basic Set2" page;  
2. On the "Basic Set2" page, you can set the display language of the LCD screen as needed. Click the "UP" and "DOWN" buttons below the LCD screen to switch language options. The current available options are: English, German, Polish, Hungarian, Spanish, Czech, Ukrainian.

3. After switching to the desired language, click on the check mark icon in the bottom right corner of the page to save the settings.

Note: If the current LCD screen does not have a Basic Set2 page, or if the language option on the Basic Set2 page does not include the language you need to set, please contact the after-sales support team to update the HMI firmware and language firmware package of the inverter. After the update is completed, follow the above steps to complete the setup.

## 7.6 Battery Setup Menu

**Battery Setting**

Batt Mode

☒ Lithium

☐ Use Batt V

☐ Use Batt %

☐ No Batt

Batt Capacity 200Ah

Max A Charge 380A

Max A Discharge 380A

☒ Activate Battery

☐ Gen Force

Batt set1

↑

↓

✕

✓

Click "Battery Setting" to enter this page.

**Lithium:** When using AI-W16 and other batteries from the 'Approved Battery List' that can communicate with the inverter, check this option.

**Note:** When using the All-in-One solution consisting of the inverter module and AI-W16 battery module, the battery shall not be managed by setting to the "Use Batt V" and "Use Batt %" modes (except for short-term test scenarios for troubleshooting under the guidance of professional after-sales personnel). Otherwise, the damage to the battery cycle life will not be covered by the product warranty.

**Battery capacity:** When using AI-W16, no need to set. When using lead acid battery or unmatched lithium battery and set the "Batt Mode" as "Use Batt%", inverter need to use this battery capacity value to calibrate battery SOC, set as the actual battery capacity used.

**Use Batt V:** Use Battery Voltage for all the settings (V).

**Use Batt %:** Use Battery SOC for all the settings (%).

**Max. A charge/discharge:** The upper limit of battery charging and discharging current can be set according to the nominal value in the product datasheet, or set to a smaller value based on on-site requirements.

For AGM and Flooded, we recommend setting the max A charge/discharge current as no more than battery capacity x 20%.

. For Lithium, we recommend battery capacity(Ah) x 50% = Charge/Discharge amps.

. For Gel, follow manufacturer' s instructions.

**No Batt:** During the fault diagnosis process, the battery can be isolated and this mode can be activated for inverter operation status testing.

**Solar supply only:** When this function is enabled, the inverter will real-time match the PV input power with the load demand (which should not exceed the inverter's rated power). If the PV power is insufficient to support the load, the inverter will trigger fault F56 and stop inverting output. Once the lighting conditions improve and the PV power recovers to a level that can meet the load demand, the inverter will automatically resume inverting output without manual intervention.

**Active battery:** This feature will help recover a battery that is over discharged by slowly charging from the solar array or grid.

**Gen Force:** When the generator is connected, it is forced to start the generator without meeting other conditions.

### Battery Setting

|                                     |                                      |            |   |
|-------------------------------------|--------------------------------------|------------|---|
| Start                               | 30%                                  | 30%        | ② |
| A                                   | 40A                                  | 40A        |   |
| <input type="checkbox"/> Gen Charge | <input type="checkbox"/> Grid Charge |            |   |
| <input type="checkbox"/> Gen Signal | <input type="checkbox"/> Grid Signal |            |   |
| Gen Max Run Time                    | 24.0 hours                           | 24.0 hours | ③ |
| Gen Down Time                       | 0.0 hours                            |            |   |

Batt Set2

This is Battery Setup page. ① ③

**Start =30%:** When battery SOC or voltage drop to this set value, inverter will start the generator automatically via activating the "Gen Signal" to charge the battery.

**A = 40A:** The upper limit of charging current for charging batteries with power from generator connected to GEN port.

**Gen Charge:** Allow the use of power input from the GEN port to charge the battery.

**Gen Signal:** The normally open relay will close when the battery SOC or voltage drop to the set value of "Start".

This is Grid Charge, you need select. ②

**Start =30%:** When battery SOC or voltage drop to this set value, inverter will start the generator connected to the grid port automatically via activating the "Grid Signal" to charge the battery.


**A = 40A:** The upper limit of charging current for charging batteries with power from grid port.

**Grid Charge:** It's allowed to use power fed from the grid port, which includes grid or generator connected to the grid port, to charge the battery.

**Grid Signal:** When a generator is connected to the grid port of hybrid inverter, this 'Grid signal' can be used to control the dry contact to start or stop the generator.

**Gen Max Run Time:** It indicates the longest time Generator can run in one day, when time is up, the Generator will be turned off. 24H means that it does not shut down all the time.

**Gen Down Time:** It indicates the rest time of the generator before the inverter start it again. ③

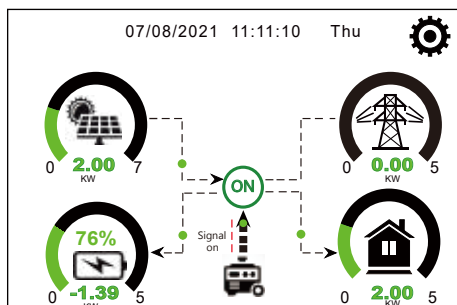

After the conditions for starting the generator are met, the inverter will close the G-S dry contact. Meanwhile, a generator icon will appear on the main page of the LCD screen, and displaying "Signal On" to indicate that the Gen signal is currently in an active state.

Generator

Power: 6000W

Today=10 KWH

Total =10 KWH

V\_L1: 230V

V\_L2: 230V

V\_L3: 230V

P\_L1: 2KW

P\_L2: 2KW

P\_L3: 2KW

Click the generator icon on the main screen, you can enter the 'Generator' detail page. The information contained on this page is as follows:

- (1) How much power is using from generator;
- (2) How much energy has used from generator in today or in total;
- (3)The output phase voltage of generator.
- (4)The output frequency of generator.

Battery Setting

Lithium Mode

00

Shutdown

10%

Low Batt

20%

Restart

40%

Batt Set3

↑

↓

✕

✓

When the "Lithium" mode is selected, the content on the "Batt Set 3" page is shown in the figure on the left.

**Lithium Mode:** This is the BMS communication protocol code which can be confirmed on the "Approved Battery list" based on the battery model you are using.

**Shutdown:** Be valid in Off-grid mode, battery can discharge to this SOC, then the DC/AC inverter module of this inverter will be shut down and the solar power can only be used to charge the battery.

**Low Batt:** Be valid in On-grid mode, when the 'Grid charge' has been checked and the set target battery SOC on 'Time of Use' page isn't less than the "Low Batt" value, the battery SOC will remain not less than the value of "Low Batt" .

**Restart:** Be valid in Off-grid mode, after the DC/AC inverter module of this inverter is shut down, the PV power can only be used to charge the battery. After the battery SOC has resumed to this "Restart" value, the DC/AC inverter module will restart to output AC power.

### Battery Setting

|                    |           |                   |         |                               |
|--------------------|-----------|-------------------|---------|-------------------------------|
| Float V ①          | 53.6V     | Shutdown ③        | 20%     | ↑<br>Batt Set3<br>↓<br>✕<br>✓ |
| Absorption V       | 57.6V     | Low Batt          | 35%     |                               |
| Equalization V     | 57.6V     | Restart           | 50%     |                               |
| Equalization Days  | 30 days   | TEMPCO(mV/C/Cell) | ② -5    |                               |
| Equalization Hours | 3.0 hours | Batt Resistance   | 25mOhms |                               |

When the "Use Batt V" or "Use Batt %" mode is selected, the content on the "Batt Set 3" page is shown as the figure on the left.

**Zone ① is three stage charging strategy for charging battery in "Batt V" or "Batt %" mode.**

For professional use only. If you are not familiar with these settings, please keep the default values.

**Shutdown** : Be valid in Off-grid mode, when battery SOC/ voltage drop to this value, then the DC/AC inverter module of this inverter will be shut down and the solar power can only be used to charge the battery.

**Low Batt** : Be valid in On-grid mode, when the "Grid charge" has been checked and the set target battery SOC/voltage on "Time of Use" page isn't less than the "Low Batt" value, the battery SOC/voltage will remain above the value of "Low Batt" .

**Restart** : Be valid in Off-grid mode, after the DC/AC inverter module of this inverter is shut down, the PV power can only be used to charge the battery. When the battery SOC has returned to this "Restart" value, the DC/AC inverter module will restart to output AC power. ③

**Float V**: After the battery is fully charged, the inverter will continuously charge the battery with a constant low voltage slightly higher than the battery terminal voltage, to compensate for the battery's self-discharge, maintain its full state, avoid overcharging, and extend the battery life.

**Absorption V**: During the constant-current and constant-voltage charging phases of the battery, the battery port of inverter will output this voltage to charge the battery. At the final stage of constant-voltage charging, the charging current will gradually decrease, until the battery is fully charged.

**Equalization V**: A specific constant voltage slightly higher than the absorption voltage output by the inverter during the lead-acid battery maintenance charging phase. It is used to eliminate the voltage difference between individual cells in the series battery pack, decompose vulcanization crystals on the plates, make the capacity of all individual cells consistent, prevent the lagging cells from dragging down the life of the whole pack.

**Equalization Days**: The time interval between two automatic equalization charging triggers of the inverter.

**Equalization Hours**: The duration of a single equalization charging procedure. ①

**TEMPCO**: The temperature coefficient of a lead-acid battery, using to describe the reverse variation of charging voltage with temperature. Taking 25 °C as the reference, its typical value is -3~-5mV/°C /Cell. It reduces the charging voltage at high temperature to prevent overcharge, and increases the voltage at low temperature to compensate capacity, avoiding battery thermal runaway or undercharging.

**Batt Resistance**: The standard internal resistance value of the lead-acid battery, so that the inverter can accurately identify the battery status through the changes of charging current and voltage, dynamically adjust the charging strategy, avoid overcharging or undercharging, and adapt to lead-acid batteries with different aging degrees. ②

## Recommended battery settings

| Battery Type | Absorption Stage                  | Float Stage   | Equalization Voltage (every 30 days 3hr ) |
|--------------|-----------------------------------|---------------|-------------------------------------------|
| AGM (or PCC) | 14.2V (57.6V)                     | 13.4V (53.6V) | 14.2V (57.6V)                             |
| Gel          | 14.1V (56.4V)                     | 13.5V (54.0V) |                                           |
| Wet          | 14.7V (59.0V)                     | 13.7V (55.0V) | 14.7V (59.0V)                             |
| Lithium      | Follow its BMS voltage parameters |               |                                           |

## 7.7 System Work Mode Setup Menu

**System Work Mode**

☐ Selling First 12000 Max Solar Power  
☒ Zero Export To Load ☒ Solar Sell  
☐ Zero Export To CT ☒ Solar Sell

Max Sell Power 12000 Zero-export Power 20

Energy pattern ☒ BatFirst ☐ LoadFirst  
☒ Grid Peak Shaving 8000 Power

↑ Work Mode 1  
 ↓  
 ✕  
 ✓

## Work Mode


**Selling First:** This Mode allows hybrid inverter to sell back any excess power produced by the solar panels to the grid. If time of use is active, the battery energy also can be sold into grid.

The PV energy will be used to power the load and charge the battery, then the excess PV energy will flow to grid. Power source priority for the load is as follows:


1. Solar Panels.
2. Batteries (when the actual battery SOC is higher than the target SOC).
3. Grid.

**Zero Export To Load:** Hybrid inverter will only provide power to the backup load connected. The hybrid inverter will neither provide power to the home load nor sell power to grid, if the "solar sell" behind is not enabled.

The built-in CT will detect current flowing back to the grid, if there is, the inverter will reduce the generate power to only power the backup loads, smart loads and charge the battery.

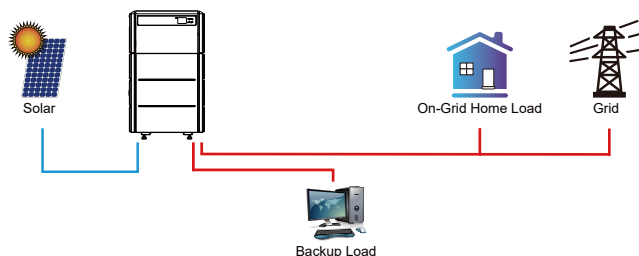

**Zero Export To CT:** Hybrid inverter will not only provide power to the backup load connected but also give power to the home load connected. If PV power and battery power is insufficient, it will take grid energy as supplement. The hybrid inverter will not sell power to grid, if the "solar sell" behind is not enabled. In this mode, a external CT or smart meter must be installed. As to the installation method of the CT or smart meter, please refer to the chapter 4.2.5 of this manual. The external CT or smart meter will detect the current flowing back to the grid, if there is, the inverter will reduce generate power to prevent selling power to grid.

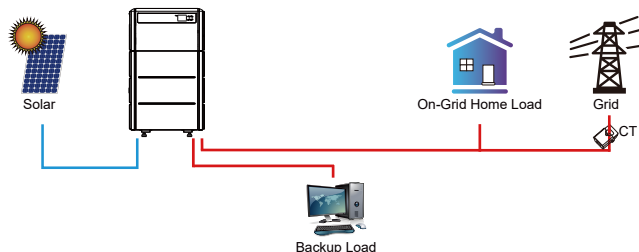

**Solar Sell:** “Solar sell” is for Zero export to load or Zero export to CT: when this item is active, the PV energy will first power the loads or charge the battery, then the surplus PV energy can be sold back to grid.

**Max. sell power:** Maximum power allowed to flow to grid.

**Zero-export Power:** When the inverter reaches the zero-export balance point, it is allowed to draw small-power electricity from the grid or feed small-power electricity to the grid according to this set value.

**Energy Pattern:** Priority of PV power usage. When "Grid charge" is enabled, the default energy pattern is "Load First", this setting will be invalid.

**Batt First:** PV power is firstly used to charge the battery and then used to power the load. If PV power is insufficient, grid will make supplement for battery and load simultaneously.

**Load First:** PV power is firstly used to power the load and then used to charge the battery. If PV power is insufficient, grid will make supplement for battery and load simultaneously.

**Max Solar Power:** The maximum DC input power allowed.

**Grid Peak-shaving:** When it is active, grid power will be limited within the set value. If the grid peak-shaving power plus PV power plus battery power cannot meet the power consumption of the load, the grid peak-shaving will be invalid, and the power taken from the grid can exceed this set value.



### System Work Mode

☒ Time Of Use

| Grid Charge              | Gen                      | Sell                     | Time        | Power | Batt |
|--------------------------|--------------------------|--------------------------|-------------|-------|------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 01:00 05:00 | 20000 | 80%  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 05:00 09:00 | 20000 | 40%  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 09:00 13:00 | 20000 | 40%  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 13:00 17:00 | 20000 | 80%  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 17:00 21:00 | 20000 | 40%  |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 21:00 01:00 | 20000 | 35%  |

Work Mode2

**Time of use:** it is used to program when to use grid or generator to charge the battery, and when to discharge the battery to power the load. Only when 'Use Timer' is checked can the parameters below be set.

**Grid Charge:** It allows AC power to be drawn from the Grid port side for battery charging.

**Gen (Gen Charge):** It allows AC power to be drawn from the Gen port side for battery charging.

**Sell:** When enabled, during the current time period, the work mode will be "Selling first", which means the excess photovoltaic power and battery discharging power can be sold to the grid.

**Time:** The start time of the current period and the end time of the previous period.

**Power:** The maximum allowable discharge power of the battery is only valid under the "Selling first" mode.

**Batt:** The target value of battery voltage or SOC during the current time period. If the actual SOC or voltage of the battery is lower than the target value, the battery needs to be charged. If there is a energy source like solar power or grid, the battery will be charged; If the actual SOC or voltage of the battery is higher than the target value, the battery can discharge, and when the solar power is not enough to power the load or the "Selling First" is enabled, the battery will discharge.

**Note:** 1. Only when the hybrid inverter operates in selling first mode and the 'Time of Use' has been enabled, the battery power can be sold to the grid.

2. For more flexible and controllable use of batteries, it is recommended to enable the 'Time of Use' function. When the inverter is operating in on-grid mode and 'Time of Use' is not enabled, the inverter can charge normally, but only discharge to provide the inverter's self-consumption power, will not discharge to power the loads.

3. Only the 6th time period is allowed to cross midnight. Assuming that at the end of the previous time period, the actual battery SOC/voltage reaches or approaches the target value of the previous timeperiod.

**For example**

**During 00:05-05:00,**  
if battery SOC is lower than 80%, it will use grid to charge the battery until battery SOC reaches 80%.

**During 05:00-08:00,**  
if battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%. At the same time, if battery SOC is lower than 40%, then grid will charge the battery SOC to 40%.

**During 08:00-10:00,**  
if battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

**During 10:00-15:00,**  
If battery SOC is lower than 80%, hybrid inverter will charge the battery until the SOC reaches 80%. If the PV power is sufficient, the battery can be charged to 100%.

**During 15:00-18:00,**  
when battery SOC is higher than 40%, hybrid inverter will discharge the battery until the SOC reaches 40%.

**During 18:00-00:05,**  
when battery SOC is higher than 35%, hybrid inverter will discharge the battery until the SOC reaches 35%.

When 'Batt Mode' is set to 'Use Batt V', the TOU page will be as shown in the left figure, and for all-in-one systems, the settings on this page are generally not used (except for fault diagnosis).

### System Work Mode

☒ Time Of Use

| Grid Charge              | Gen                      | Sell                     | Time        | Power | Batt  |
|--------------------------|--------------------------|--------------------------|-------------|-------|-------|
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 01:00 05:00 | 20000 | 49.0V |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 05:00 09:00 | 20000 | 49.0V |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 09:00 13:00 | 20000 | 49.0V |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 13:00 17:00 | 20000 | 49.0V |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 17:00 21:00 | 20000 | 49.0V |
| <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | 21:00 01:00 | 20000 | 49.0V |

Work Mode2

### System Work Mode

☒ Mon  
☒ Tue  
☒ Wed  
☒ Thu  
☒ Fri  
☒ Sat  
☐ Sun

INV Max Export Power :20000W

Max Import Power :31000W

☐ Hard export control set

P 100.0%Pmax

Work Mode4

It allows users to choose which day to execute the setting of "Time of Use". For example, under the setting shown in the left figure, Sunday will not execute the strategy of "Time of use" setting.

**INV Max Export Power:** Current Maximum Allowable AC Inverting Output Power of the DC/AC Module.

**Max Import Power:** Current Maximum Allowable Input Power Limit at the Grid Port of the Hybrid Inverter.

**Hardware Export Control Set:** When the export power exceeds the configured Hardware Export Control Set threshold, the inverter will disconnect the grid relay, trigger warning W13, and stop working. The inverter will then automatically switch to off-grid operation. After approximately 2 minutes, the inverter will reconnect the grid relay and re-evaluate the export power. If the export power has returned within the configured hardware export limit, the inverter will resume normal on-grid operation.

# 7.8 Grid Setup Menu

## 7.8.1 Grid Standard Selection

Grid Setting/Grid code selection

Unlock Grid Setting

Grid Password Set

Grid Mode

General Standard

0/42

Grid Frequency

50HZ

60HZ

Phase Type

0/120/240

0/240/120

Grid Level

LN:230VAC LL:400VAC

☐ IT system-neutral is not grounded

Grid Set1

↓

✕

✓

**Unlock Grid Setting:** To prevent misoperation, you need to click this button first and enter the initial or preset unlock password before performing the Grid Setting configuration.

**Grid Password Set:** Click this button to change the unlock password for Grid Setting.

**Grid Mode:** General Standard、UL1741 & IEEE1547、CPUC RULE21、SRD-UL-1741、CEI 0-21、Australia A、Australia B、Australia C、EN50549、CZ-PPDS(>16A)、NewZealand、VDE4105、OVE-Directive R25.


**Grid Frequency:** In scenarios where grid connected operation is required, set according to the rated frequency of the power grid; In pure off grid scenarios, it can be set according to the rated frequency of the load.

**Phase Type:** Perform the configuration according to the wire sequence of the AC cable connected to the inverter Grid terminal. If the inverter triggers W03 during grid-tied operation, this configuration needs to be adjusted.

**Grid Level:** Refers to the supported public utility grid voltage standards for the hybrid inverter during on-grid operation, as well as the rated output voltage supported during off-grid operation. LN:230VAC LL:400VAC, LN:240VAC LL:420VAC, LN:120VAC LL:208VAC, LN:133VAC LL:230VAC

**Note:** The HMI firmware is shared by multiple inverter models. Due to hardware version differences, some options may be invalid on the current hardware. You can conduct tests in off-grid mode to verify the validity of the current setting.

**IT system:** If the grid system is IT system, then please enable this option. For example, the IT grid system voltage is 230Vac (the Line voltage between any two live lines in a three-phase circuit is 230Vac, and the diagram is as follow) then please enable "IT system" and tick the "Grid level" as LN:133VAC LL:230VAC as below picture shows.

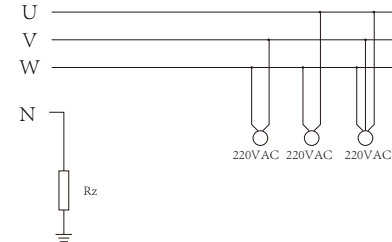

Rz: Large resistance ground resistor. Or the system doesn't have Neutral line

Grid Setting/Grid code selection

Unlock Grid Setting

Grid Password Set

Grid Mode

CEI\_0\_21\_Internal

4/42

Grid Frequency

50HZ

60HZ

Phase Type

0/120/240

0/240/120

Grid Level

LN:230VAC LL:400VAC

☐ IT system-neutral is not grounded

Grid Set1

↓

✕

✓

### Grid Setting/Connect

|                      |                     |                |         |
|----------------------|---------------------|----------------|---------|
| Normal connect       | Normal Ramp rate    | 10s            |         |
| Reconnect after trip | Reconnect Ramp Rate | 36s            |         |
| Low frequency        | 48.20Hz             | High frequency | 51.30Hz |
| Low voltage          | 187.0V              | High voltage   | 263.0V  |
| Reconnection Time    | 60s                 | PF             | 1.000   |

Grid Set2  
 ↑  
 ↓  
 ✕  
 ✓

**Normal connect:** The allowed grid voltage/frequency range when the inverter first time connect to the grid.

**Normal Ramp rate:** It is the startup power ramp.

**Low Frequency:** Grid frequency lower limit for grid connection

**High Frequency:** Grid frequency upper limit for grid connection

**Low Voltage:** Grid voltage lower limit for grid connection

**High Voltage:** Grid voltage upper limit for grid connection

**Reconnect Ramp Rate:** It is the reconnection power ramp

**Reconnect Time:** The waiting time for the inverter connects the grid again after tripping.

**PF:** Power factor which is used to adjust inverter reactive power

### Grid Setting/IP Protection

Over voltage U>(10 min. running mean) 260.0V

|     |        |     |         |
|-----|--------|-----|---------|
| HV3 | 265.0V | HF3 | 51.50Hz |
| HV2 | 265.0V | HF2 | 51.50Hz |
| HV1 | 265.0V | HF1 | 51.50Hz |
| LV3 | 185.0V | LF3 | 48.00Hz |
| LV2 | 185.0V | LF2 | 48.00Hz |
| LV1 | 185.0V | LF1 | 48.00Hz |

Grid Set3  
 ↑  
 ↓  
 ✕  
 ✓

**HV1:** Level 1 overvoltage protection point;  
**HV2:** Level 2 overvoltage protection point; ② 0.10s—Trip time.  
**HV3:** Level 3 overvoltage protection point.

**LV1:** Level 1 undervoltage protection point;

**LV2:** Level 2 undervoltage protection point;

**LV3:** Level 3 undervoltage protection point.

**HF1:** Level 1 over frequency protection point;

**HF2:** Level 2 over frequency protection point;

**HF3:** Level 3 over frequency protection point.

**LF1:** Level 1 under frequency protection point;

**LF2:** Level 2 under frequency protection point;

**LF3:** Level 3 under frequency protection point.

### Grid Setting/F(W)

☐ P(Lf) ☐ P(Hf) ☐ Pnom/Pmax

|                 |          |               |         |
|-----------------|----------|---------------|---------|
| Over frequency  | Drpoo f> | 40%Pmax/Hz    |         |
| start freq F>   | 50.20Hz  | stop freq F>  | 50.20Hz |
| start delay F>  | 0.00s    | stop delay F> | 0.00s   |
| Under frequency | Drpoo f> | 40%Pmax/Hz    |         |
| start freq f    | 49.80Hz  | stop freq f   | 49.80Hz |
| start delay f   | 0.00s    | stop delay f  | 0.00s   |

Grid Set4  
 ↑  
 ↓  
 ✕  
 ✓

Click the 'F(W)' sub-setting on the 'Grid Setup' page to enter this page.

**P(Hf):** When the grid frequency is high, the inverter reduces its active power output to decrease the excess energy in the grid system, helping to restore grid frequency stability.

**P(Lf):** When the grid frequency is low, the inverter will increase its active power output to help compensate for the power deficit of the grid system, thereby stabilizing the grid frequency.

**Pn/Pmax:** When enabled, the rated output power of the inverter is used as the reference value for Droop F. When disabled, the maximum output power of the inverter is used as the reference value for Droop F.

**Droop F:** P(HF) Droop Rate. When pn/Pmax is enabled, the unit is Pn/Hz; When Pn/Pmax is disabled, the unit is Pmax/Hz.

**Start Frequency F:** P(HF) Start Frequency.

**Start Delay:** P(HF) mechanism start-up delay time.

**Stop Frequency F:** P(HF) Stop Frequency.

**Stop Delay:** P(HF) mechanism stop delay time.

**Grid Setting/V(W) V(Q)**

☐ V(W) ☐ V(Q)

|    |        |    |      |
|----|--------|----|------|
| V1 | 108.0% | P1 | 100% |
| V2 | 110.0% | P2 | 80%  |
| V3 | 112.0% | P3 | 60%  |
| V4 | 114.0% | P4 | 40%  |

|            |        |             |      |
|------------|--------|-------------|------|
| Lock-in/Pn | 5%     | Lock-out/Pn | 20%  |
| V1         | 94.0%  | Q1          | 44%  |
| V2         | 97.0%  | Q2          | 0%   |
| V3         | 105.0% | Q3          | 0%   |
| V4         | 108.0% | Q4          | -44% |

Grid Set5

**V(W)**: It is used to adjust the inverter active power according to the set grid voltage.  
**V(Q)**: It is used to adjust the inverter reactive power according to the set grid voltage.  
 This function is used to adjust inverter output power (active power and reactive power) when grid voltage changes.

**Lock-in/Pn 5%**: When the inverter active power is less than 5% rated power, the VQ mode will not take effect.  
**Lock-out/Pn 20%**: If the inverter active power is increasing from 5% to 20% rated power, the VQ mode will take effect again.

For example: V2=110%, P2=80%. When the grid voltage reaches the 110% times of rated grid voltage, inverter output power will reduce its active output power to 80% rated power.  
 For example: V1=94%, Q1=44%. When the grid voltage reaches the 94% times of rated grid voltage, inverter output power will output 44% reactive output power.  
 For the detailed setup values, please follow the local grid code.

**Grid Setting/P(Q) P(F)**

☐ P(Q) ☐ P(PF)

|    |     |    |     |
|----|-----|----|-----|
| P1 | 0%  | Q1 | 2%  |
| P2 | 2%  | Q2 | 0%  |
| P3 | 0%  | Q3 | 21% |
| P4 | 22% | Q4 | 25% |

|            |     |             |        |
|------------|-----|-------------|--------|
| Lock-in/Pn | 50% | Lock-out/Pn | 50%    |
| P1         | 0%  | PF1         | -0.000 |
| P2         | 0%  | PF2         | -0.000 |
| P3         | 0%  | PF3         | 0.000  |
| P4         | 62% | PF4         | 0.264  |

Grid Set6

**P(Q)**: It is used to adjust the inverter reactive power according to the set active power.  
**P(PF)**: It is used to adjust the inverter PF according to the set active power.  
 For the detailed setup values, please follow the local grid code.

**Lock-in/Pn 50%**: When the inverter output active power is less than 50% rated power, it won't enter the P(PF) mode.  
**Lock-out/Pn 50%**: When the inverter output active power is higher than 50% rated power, it will enter the P(PF) mode.  
 Note : only when the grid voltage is equal to or higher than 1.05times of rated grid voltage, then the P(PF) mode will take effect.

**Grid Setting/LVRT**

☐ L/HVRT

|     |    |       |       |
|-----|----|-------|-------|
| HV3 | 0% | HV3_T | 0.00s |
| HV2 | 0% | HV2_T | 0.00s |
| HV1 | 0% | HV1_T | 0.00s |
| LV1 | 0% | LV1_T | 0.00s |
| LV2 | 0% | LV2_T | 0.00s |

Grid Set7

**Reserved**: This function is reserved. It is not recommended.

**Basic Setting**

☐ Time Syncs ☐ Beep ☒ Auto Dim

Year: 2019 Month: 03 Day: 17

Hour: 09 Minute: 15

☐ 24-Hour

☐ Factory Reset ☒ Lock out all changes

Basic Set

After setting grid parameters, please select "Lock out all changes" and enter password. If the engineer does not know the password, please contact your distributor.

### 7.8.3 Grid Parameter Check

After steps above, customers can see firmware version on Device Info page (refer to section 7.12) and Grid parameters on Grid Setting page

### 7.8.4 CEI 0-21 Self-Check Report

#### Grid Setting/Grid code selection

Unlock Grid Setting

Grid Password Set

Grid Mode

CEI\_0\_21\_Internal

4/42

Grid Frequency

50HZ

60HZ

Phase Type

0/120/240

0/240/120

Grid Level

LN:230VAC LL:400VAC

☐ IT system-neutral is not grounded

Grid Set1

↓

✕

✓

Firstly, choose "CEI-021" for Grid Mode, select "50Hz" for Grid Frequency, and "Single Phase" for Grid Type.

#### Grid Warning

Grid Mode: CEI\_0\_21Internal

50Hz

Grid Level: LN:230 VAC LL:400VAC

Phase Type: 0/240/120

IT system: Disable

Please make sure that the settings are correct before clicking OK, otherwise the inverter will be damaged!!!

CANCEL

OK

Click "OK" to confirm.

#### Advanced Function

☐ Solar Arc Fault ON

☐ Gen peak-shaving

☐ Clear Arc\_Fault

☐ Grid Var Comp

☐ System selfcheck

2000.1

CT Ratio

☐ DRM

normal

UPS Delay

☐ Neutral to earth bonding

☐ BMS\_Err\_Stop

☐ Asymmetric phase feeding

☐ CEI Report

Func Set1

↑

↓

✕

✓

Secondly, tick "System selfcheck" on Advanced Function page. then you need to input the password. and the default password is 1234.

Note: please don't tick "CEI-021 Report".

This "System selfcheck" program is valid only after choosing grid type as "CEI-021".

#### PassWord

X-X-X-X

DEL

1

2

3

4

5

6

7

8

9

CANCEL

0

OK


The default password is 1234  
After input the password and then tick "OK"





|                        | ON                                                                                                                                                                                                     |                                                                                                                                                                                                    | OFF                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                    |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                        | ON-GRID mode                                                                                                                                                                                           | OFF-GRID mode                                                                                                                                                                                      | ON-GRID mode                                                                                                                                                                   | OFF-GRID mode                                                                                                                                                                                                                                                                                                                      |
| AC couple on GEN port  | Invalid.<br>When grid voltage is present, the GEN port main relay will pull indirectly, regardless of the battery SOC/voltage.                                                                         | Valid.<br>When the battery SOC/voltage drops to the ON set value, the hybrid inverter will pull in its GEN port main relays, allowing the On-grid inverter to connect and generate power normally. | Invalid.<br>After the battery is fully charged, the excess power generated by the grid connected inverter can be sold to the grid without causing overcharging of the battery. | Valid.<br>When the battery SOC/voltage rises to the OFF set value, the hybrid inverter will open its GEN port main relays, and the on-grid inverter will enter off-grid mode and stop power generation.                                                                                                                            |
| AC couple on Grid port | Invalid                                                                                                                                                                                                | The hybrid inverter operates in islanding mode and the on-grid inverter does not work                                                                                                              | Invalid                                                                                                                                                                        | The hybrid inverter operates in islanding mode and the on-grid inverter does not work                                                                                                                                                                                                                                              |
| AC couple on Load port | Invalid.<br>The Load port of the hybrid inverter maintains continuous voltage output. After the grid-tied inverter pulls in its main relay and connects to the system, it can generate power normally. |                                                                                                                                                                                                    | Invalid.<br>The output frequency of the hybrid inverter must remain synchronized with the grid, and frequency shift is not achievable.                                         | Valid.<br>When the battery SOC/voltage rises to the OFF set value, the hybrid inverter will raise the frequency of the AC output side to the set value of AC couple Fz high, making the on-grid inverter trip due to over-frequency (the over-frequency protection threshold of the on-grid inverter needs to be set accordingly). |

## 7.11 Advanced Function Setup Menu

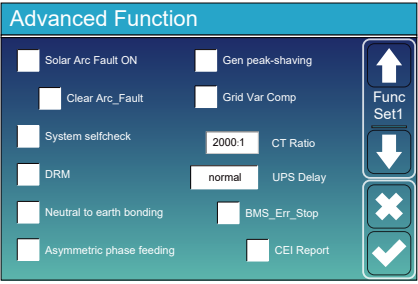

**Solar Arc Fault ON(Optional):** This function is optional. Some models do not have this function, and the specific details are subject to the hardware version of the inverter received. After enabling this function, the inverter will detect whether there is a arcing fault on the PV side. If arcing occurs, the inverter will report a fault and stop outputting power.

**Clear Arc\_Fault(Optional):** After the arc fault on the PV side is eliminated, enabling this function can eliminate the arc fault alarm of the inverter and restore normal operation of the inverter.

**System selfcheck:** Disable. this is only for factory.

**Grid Var Comp:** When Grid Var Comp is enabled, the inverter can dynamically adjust its reactive power output according to the grid conditions to provide reactive power compensation. The compensation upper limit is 40% of the rated power of the inverter.

**Gen Peak-shaving:** Limit the maximum output power of the generator to the set rated power on "GEN PORT USE" page, the rest of power consumption will be provided by PV and battery to ensure that the generator will not overload.

**DRM:** Demand response mode, receive external commands for active power scheduling and reactive power scheduling.

**UPS Delay:** Defines the inverter output recovery time after a grid outage. Three options are available: Normal (10 ms), 0 ms, and Custom (100-30,000 ms), allowing the transfer delay to be adjusted according to application requirements.


**CT Ratio:** When an external current transformer (CT) is directly used for current sampling at the grid connection point, this parameter shall be set according to the transformation ratio of the actually applied external CT. Range: 100:1-10000:1, adjustment step:100.

**BMS\_Err\_Stop:** When it is active, if the battery BMS failed to communicate with inverter, the inverter will stop working and report fault.

**Neutral to earth bonding:** When the "Neutral to Earth Bonding" function is enabled, and the inverter operates in off-grid mode, the internal relay between neutral (load port N) and protective earth (PE) will close, bonding the neutral line to the inverter ground.

**Note:** If this function is enabled, the inverter shell must be reliably grounded. Failure to do so may result in an electric shock hazard upon contact with the inverter shell.

**Asymmetric phase feeding:** When the loads connected to the Load port have an unbalanced distribution on the three phases and the inverter is working in on-grid mode, enabling this function will ensure an equal power absorption from the three phases of grid.

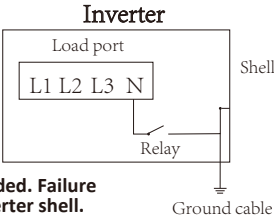



## Advanced Function

| DC 1 for WindTurbine |           | DC 2 for WindTurbine |            |
|----------------------|-----------|----------------------|------------|
| V1                   | 90V 0.0A  | V7                   | 210V 9.0A  |
| V2                   | 110V 1.5A | V8                   | 230V 10.5A |
| V3                   | 130V 3.0A | V9                   | 250V 12.0A |
| V4                   | 150V 4.5A | V10                  | 270V 13.5A |
| V5                   | 170V 6.0A | V11                  | 290V 15.0A |
| V6                   | 190V 7.5A | V12                  | 310V 16.5A |

Wind Set2


⬆

⬇

✖

✓

This is for Wind Turbine

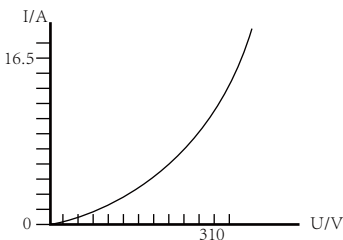

### DC 1 for Wind Turbine:

Connect the wind turbine to the MPPT 1 of hybrid inverter.

**DC 2 for Wind Turbine:** Connect the wind turbine to the MPPT 2 of hybrid inverter.

**V1-V12:** Use 12 points to fit the output U/I curve of the wind turbine controller. Voltage Range: 50-480V, Current Range: 0.1-36A.

## Advanced Function

|                                         |           |           |
|-----------------------------------------|-----------|-----------|
| <input type="checkbox"/> Parallel       | Modbus SN | Baud Rate |
| <input checked="" type="radio"/> Master | 01        | 9600      |
| <input type="radio"/> Slave             |           |           |

|                                          |                                          |
|------------------------------------------|------------------------------------------|
| <input type="checkbox"/> EX_Meter For CT | <input type="checkbox"/> Grid Tie Meter2 |
| <input type="checkbox"/> Low_Noise       | <input type="checkbox"/> MPPT_Scan       |

Meter Select  
No Meter 0/5

Paral. Set3

⬆

⬇

✖

✓

**Parallel:** Enable this function when several same model hybrid inverters are connecting in parallel.

**Master:** Select any hybrid inverter in the parallel system as the master inverter, and the master inverter needs to manage the working mode of the parallel system.

**Slave:** Set the other inverters managed by the master inverter as slave inverter.

**Modbus SN:** The Modbus address of each inverter, should be different.

**Baud Rate:** The rate at which inverter transmits data.

Note: In a system with multiple inverters operating in parallel, if one inverter stops output due to a fault, it typically triggers all other inverters in the parallel system to report faults and cease output as well.

**Ex\_Meter For CT:** when using zero-export to CT mode, the hybrid inverter can select EX\_Meter For CT function and use the different meters.e.g.CHNT and Eastron.

**Low\_Noise:** Increase the switching frequency of power components(Like MOSFET and IGBT) to reduce high-frequency noise caused by resonance and other factors.

**Meter Select:** Available option includes Eastron/CHINT/Smart.TX/Deye-3P. If the Smart TX LoRa master node is used for communication with Smart Devices, please select Smart.TX. If the Smart CT meter is used for wired RS485 communication with this inverter, please select Deye-3P.

**Grid Tie Meter2:** When there are one or more grid-tied inverters AC coupled on the grid or load port side of the hybrid inverter, and an external meter is installed for this/these grid-tied inverters, it is necessary to enable this function to upload the data of the external meter to the hybrid inverter to ensure that the power consumption data of the load is correct.

**MPPT Scan:** After enabling this function, MPPT will perform I-V curve scanning every 5 minutes to find the maximum power point and eliminate MPPT failure caused by shadows.

### Advanced Function

☐ Parallel
 ☐ Master
 ☐ Slave

Modbus SN: 01
 Baud Rate: 9600

☐ Ex\_Meter For CT
 ☐ Grid Tie Meter2

☐ Low\_Noise
 ☐ MPPT\_Scan

Meter Select: CHNT 2/4

↑ Paral. Set3  
 ↓  
 ✕  
 ✓

**CT check** : Whether to enable CT self-test function. Performing CT self-test requires the inverter to operate in on-grid mode and the load power to be stable.  
**Start**: After selecting CT check, click this button to start the CT self-test program.

#### Operation steps:

Step 1: Tick the CT check.  
 Step 2: Click the "Start" button.  
 Step 3: Check the checking result in Zone 3.  
 Step 4: Adjust the CT phase and polarity in region 4 to ensure that the CT phase and polarity settings in region 4 are consistent with the self-test results in region 3.  
 Step 5: Click the "✓" icon in the bottom right corner to save the adjustment.

**Note**: This feature is still undergoing internal testing and will be released soon.

### Advanced Function

☐ CT Check
 Start

CT Phase Polarity

A Phase - A + CT-CTA:WAIT

B Phase - B + CT-CTB:WAIT

C Phase - C + CT-CTC:WAIT

↑ Func Set4  
 ↓  
 ✕  
 ✓

## 7.12 Device Info Setup Menu

### Device Info.

Version Info
 Fault Log

Click on "Version Info" to get the firmware version information of the hybrid inverter, and click on 'Fault Log' to retrieve the last ten alarm messages.

### Device Info.

12K

Inverter SN: 2404098579 Flash

HMI: Ver 1001-C047

MAIN: Ver 2021-1145-1807

ARC: Ver D206



## Device Info.

| Alarms Code           | Occurred         |
|-----------------------|------------------|
| F56 DC_VoltLow_Fault  | 2024-04-29 09:33 |
| F13 Grid_Mode_changed | 2024-04-29 07:22 |
| F13 Grid_Mode_changed | 2024-04-29 03:22 |
| F56 DC_VoltLow_Fault  | 2024-04-29 03:11 |




**Version Info page under Device Info.** You can view the serial number of the inverter, as well as the firmware version information of the LCD panel, main control board and arc detection board.

Fault Log page under Device Info. You can view the fault code, fault description, and specific time of occurrence.

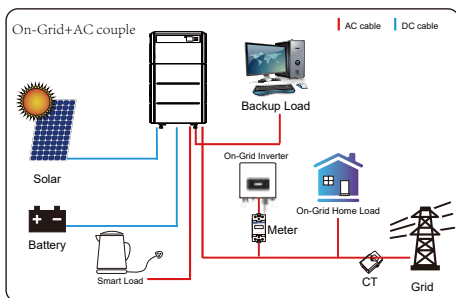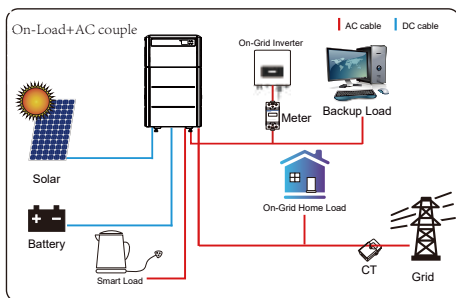


# 8. Mode


## Mode I: Basic

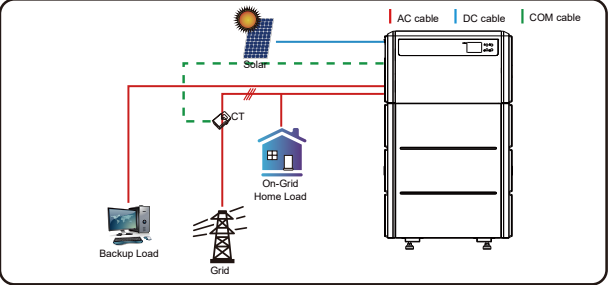




## Mode II: With Generator

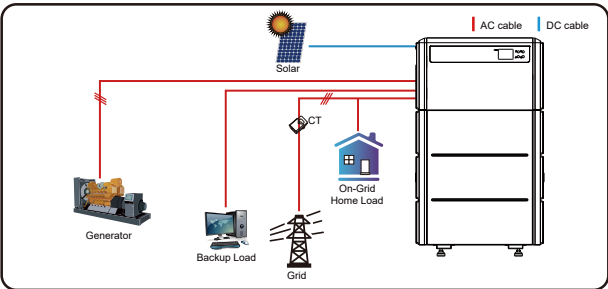

## Mode III: With Smart-Load

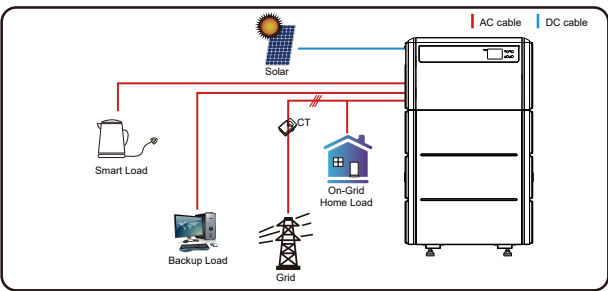

# Mode IV: AC Couple

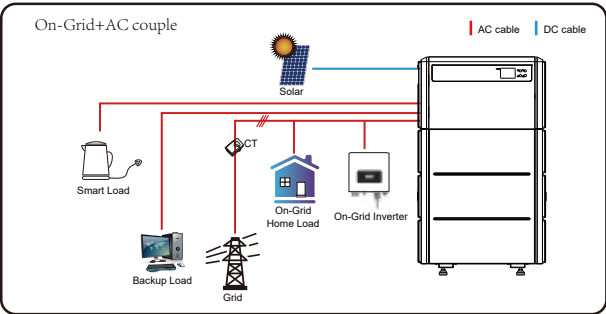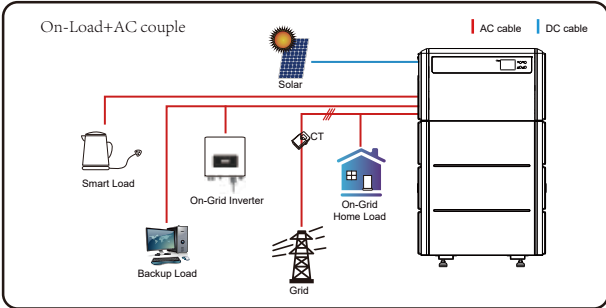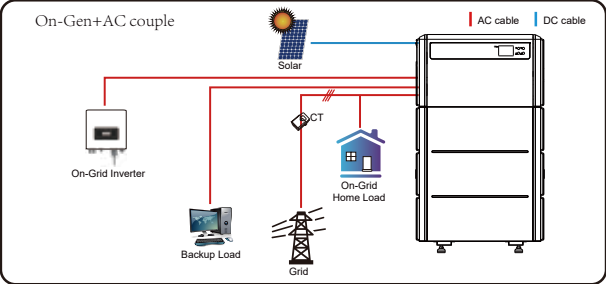

The 1st priority power of the system is always the PV power, then 2nd and 3rd priority power will be the battery bank or grid according to the settings. The last power backup will be the Generator if it is available.

## 9. Troubleshooting and Maintenance

### 9.1.1 Troubleshooting

Once the inverter fails, the fault code can be displayed on the LCD screen and monitor platform. The fault codes and troubleshooting methods of inverter are listed in the table below. The device you purchase may only contain some of the fault information, and when the inverter fails, you can check the corresponding information and how to check from this table. If you encounter a fault during use and cannot resolve it by following the instructions in the user manual, please contact your local dealer or service center promptly. please have the following information ready: inverter serial number, distributor or service center name, grid connection date, a detailed problem description and your contact information.



#### CAUTION

Restart the inverter only after removing the fault that impairs safety performance. To avoid the risk of electric shock or the destroy of inverter, do not perform any other operations beyond those described in this manual. Otherwise, the losses caused is not covered by the warranty.

\*it is strictly prohibited to open the product if there is an odor or smoke or if the product appearance is abnormal. If there is no odor, smoke, or obvious abnormal appearance, repair or restart the inverter according to the alarm corrective measures.

| Error code | Description                                  | Solutions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F08        | GFDI_Relay_Failure                           | <ol style="list-style-type: none"><li>1. When inverter is in Split phase(120/240Vac) or three-phase system (120/208Vac) system, the backup load port N line needs to connect ground;</li><li>2. If the fault still exists, please contact us for help.</li></ol>                                                                                                                                                                                                                                                                                                       |
| F13        | Working mode change                          | <ol style="list-style-type: none"><li>1. When the grid type and frequency changed it will report F13;</li><li>2. When the battery mode was changed to "No battery" mode, it will report F13;</li><li>3. For some old FW version, it will report F13 when the system work mode changed;</li><li>4. Generally, it will disappear automatically when shows F13;</li><li>5. If still same, and turn off the DC switch and AC switch and wait for one minute and then turn on the DC/AC switch;</li><li>6. Seek help from us, if can not go back to normal state.</li></ol> |
| F18        | AC over current fault of hardware            | <p>AC side over current fault</p> <ol style="list-style-type: none"><li>1. Please check whether the backup load power and common load power are within the range;</li><li>2. Restart and check whether it is in normal;</li><li>3. Seek help from us, if can not go back to normal state.</li></ol>                                                                                                                                                                                                                                                                    |
| F20        | DC over current fault of the hardware        | <p>DC side over current fault</p> <ol style="list-style-type: none"><li>1. Check PV module connect and battery connect;</li><li>2. When in the off-grid mode, the inverter startup with big power load, it may report F20. Please reduce the load power connected;</li><li>3. Turn off the DC switch and AC switch and then wait one minute, then turn on the DC/AC switch again;</li><li>4. Seek help from us, if can not go back to normal state.</li></ol>                                                                                                          |
| F22        | Tz_EmergStop_Fault                           | Please contact your installer for help.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| F23        | AC leakage current is transient over current | <p>Leakage current fault</p> <ol style="list-style-type: none"><li>1. Check PV side cable ground connection.</li><li>2. Restart the system 2~3 times.</li><li>3. If the fault still exists, please contact us for help.</li></ol>                                                                                                                                                                                                                                                                                                                                      |

| <b>Error code</b> | <b>Description</b>              | <b>Solutions</b>                                                                                                                                                                                                                                                                                                                              |
|-------------------|---------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F24               | DC insulation impedance failure | PV isolation resistance is too low<br>1. Check the connection of PV panels and inverter is firmly and correctly;<br>2. Check whether the PE cable of inverter is connected to ground;<br>3. Seek help from us, if can not go back to normal state.                                                                                            |
| F26               | The DC busbar is unbalanced     | 1. Please wait for a while and check whether it is normal;<br>2. When the hybrid in split phase mode, and the load of L1 and load of L2 is big different, it will report the F26.<br>3. Restart the system 2~3 times.<br>4. Seek help from us, if can not go back to normal state.                                                            |
| F29               | Parallel CANBus fault           | 1. When in parallel mode, check the parallel communication cable connection and hybrid inverter communication address setting;<br>2. During the parallel system startup period, inverters will report F29, when all inverters are in ON status, it will disappear automatically;<br>3. If the fault still exists, please contact us for help. |
| F34               | AC Overcurrent fault            | 1. Check the backup load connected, make sure it is in allowed power range;<br>2. If the fault still exists, please contact us for help.                                                                                                                                                                                                      |
| F35               | No AC grid                      | No Utility<br>1. Please confirm grid is lost or not;<br>2. Check the grid connection is good or not;<br>3. Check the switch between inverter and grid is on or not;<br>4. Seek help from us, if can not go back to normal state.                                                                                                              |
| F41               | Parallel system stop            | 1. Check the hybrid inverter working status. If there's 1 pcs hybrid inverter is in OFF status, the other hybrid inverters may report F41 fault in parallel system.<br>2. If the fault still exists, please contact us for help.                                                                                                              |
| F42               | AC line low voltage             | Grid voltage fault<br>1. Check the AC voltage is in the range of standard voltage in specification;<br>2. Check whether grid AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                       |
| F47               | AC over frequency               | Grid frequency out of range<br>1. Check the frequency is in the range of specification or not;<br>2. Check whether AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                 |
| F48               | AC lower frequency              | Grid frequency out of range<br>1. Check the frequency is in the range of specification or not;<br>2. Check whether AC cables are firmly and correctly connected;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                 |
| F56               | DC busbar voltage is too low    | Battery voltage low<br>1. Check whether battery voltage is too low;<br>2. If the battery voltage is too low, using PV or grid to charge the battery;<br>3. Seek help from us, if can not go back to normal state.                                                                                                                             |

| <b>Error code</b> | <b>Description</b>                 | <b>Solutions</b>                                                                                                                                                                                                                                                                                                                     |
|-------------------|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F58               | BMS communication fault            | <ol style="list-style-type: none"> <li>1. it tells the communication between hybrid inverter and battery BMS disconnected when "BMS_Err-Stop" is active;</li> <li>2. if don't want to see this happen, you can disable "BMS_Err-Stop" item on the LCD;</li> <li>3. If the fault still exists, please contact us for help.</li> </ol> |
| F63               | ARC fault                          | <ol style="list-style-type: none"> <li>1. ARC fault detection is only for US market;</li> <li>2. Check PV module cable connection and clear the fault;</li> <li>3. Seek help from us, if can not go back to normal state.</li> </ol>                                                                                                 |
| F64               | Heat sink high temperature failure | <p>Heat sink temperature is too high</p> <ol style="list-style-type: none"> <li>1. Check whether the work environment temperature is too high;</li> <li>2. Turn off the inverter for 10mins and restart;</li> <li>3. Seek help from us, if can not go back to normal state.</li> </ol>                                               |

**Chart 8-1 Fault information**



## Batty Upper Computer Fault Display.

| <b>Fault Type</b>                                     | <b>Phenomenon</b>                                                                                      | <b>Possible Causes</b>                                                                                                                                                                  | <b>Solutions</b>                                                                                                       |
|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Information collection fails                          | The cell voltage sampling circuit is faulty. The cell temperature sampling circuit is faulty.          | The welding point for cell voltage sampling is loose or disconnected. The voltage sampling terminal is disconnected. The cell temperature sensor has failed.                            | Replace the collection line.                                                                                           |
| Electrochemical cell error                            | The voltage of the cell is low or unbalanced.                                                          | Due to large self discharge, the cell over discharges to below 2.0V after long term storage. The cell is damaged by external factors, and short circuits, pinpricks, or crushing occur. | Replace the battery.                                                                                                   |
| Over-voltage protection fails                         | The cell voltage is greater than 3.65 V in charging state. The battery voltage is greater than 58.4 V. | The busbar input voltage exceeds the normal value. Cells are not consistent. The capacity of some cells deteriorates too fast or the internal resistance of some cells is too high.     | If the battery cannot be recovered due to protection against abnormality contact local engineers to rectify the fault. |
| Under voltage protection fails                        | The battery voltage is less than 44.8V. The minimum cell voltage is less than 2.8V.                    | The mains power failure has lasted for a long time. Cells are not consistent. The capacity of some cells deteriorates too fast or the internal resistance of some cells is too high.    | Same as above.                                                                                                         |
| Charge or discharge high temperature protection fails | The maximum cell temperature is greater than 60℃.                                                      | The battery ambient temperature is too high. There are abnormal heat sources around.                                                                                                    | Same as above.                                                                                                         |
| Charge low temperature protection fails               | The minimum cell temperature is less than 0℃.                                                          | The battery ambient temperature is too low.                                                                                                                                             | Same as above.                                                                                                         |
| Discharge low temperature protection fails            | The minimum cell temperature is less than -20℃.                                                        | The battery ambient temperature is too low.                                                                                                                                             | Same as above.                                                                                                         |

---

If the product is damaged due to manufacturing defects or material issues (non-human causes), customers need to return the products under the guidance of the company, and the company will provide repair or parts replacement. Customers need to pay the necessary freight and other related costs. Any replacement or repair of the product will cover the remaining warranty period of the product. If any part of the product or product is replaced by the company itself during the warranty period, all rights and interests of the replacement product or component belong to the company.

Factory warranty does not include damage due to the following reasons:

- Damage during transportation of equipment ;
- Damage caused by incorrect installation or commissioning ;
- Damage caused by failure to comply with operation instructions, installation instructions or maintenance instructions ;
- Damage caused by attempts to modify, alter or repair products ;
- Damage caused by incorrect use or operation ;
- Damage caused by insufficient ventilation of equipment ;
- Damage caused by failure to comply with applicable safety standards or regulations ;
- Damage caused by natural disasters or force majeure (e.g. floods, lightning, overvoltage, storms, fires, etc.)

In addition, normal wear or any other failure will not affect the basic operation of the product. Any external scratches, stains or natural mechanical wear does not represent a defect in the product.

## **Limitation of Liability**

In addition to the product warranty described above, the state and local laws and regulations provide financial compensation for the product's power connection (including violation of implied terms and warranties). The company hereby declares that the terms and conditions of the product and the policy cannot and can only legally exclude all liability within a limited scope.

Batty Maintenance Schedule

| <i><b>Maintenance Item</b></i> | <i><b>Frequency</b></i> | <i><b>Description</b></i>                                                                                                                      |
|--------------------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Environment & Safety           | 6 months                | Ensure no flammable or explosive materials around the product.                                                                                 |
|                                |                         | Ambient temperature and humidity within operating ranges.                                                                                      |
|                                | 12 months               | Check heat dissipation modules and vents; clean with a vacuum cleaner if necessary.                                                            |
|                                | 24 months               | Ensure air inlets and outlets are not blocked.                                                                                                 |
| Appearance & Structure         | 1 day                   | Check that status indicators are in normal condition.                                                                                          |
|                                |                         | Ensure no foreign objects wrap or cover the product exterior.                                                                                  |
|                                | 3 months                | Visual inspection of the product: no obvious paint peeling or rust, no dust at vents, no vermin, fasteners secured, parameter settings normal. |
|                                | 12 months               | Check screws for no loss or rust.                                                                                                              |
|                                |                         | Warning labels and marks legible and intact; replace if stained or damaged.                                                                    |
|                                | 24 months               | No oxidation or rust.                                                                                                                          |
|                                |                         | No damage or deformation.                                                                                                                      |
| Electrical & Connections       | 6 months                | Cables: securely connected, undamaged, no water ingress, intact insulation tape at terminals, proper routing.                                  |
|                                | 12 months               | Check and retighten electrical connections to specified torque.                                                                                |
|                                |                         | Check grounding and equipotential bonding; grounding resistance $\leq 0.4 \Omega$ .                                                            |
|                                | 24 months               | Verify correct wiring.                                                                                                                         |
| Battery Pack                   | 3 months                | good appearance, proper ambient temperature/humidity, normal operating voltage and current.                                                    |
|                                | 6 months                | no rust or foreign objects, fan operates properly, BMS free of alarms.                                                                         |
| Protection & Safety Devices    | 3 months                | Verify normal function of equipment switches.                                                                                                  |
| System Operation               | 1 day                   | Log in to the management platform (WEB/EMS/APP, etc.) to check system alarms.                                                                  |
|                                | 12 months               | Check battery module SoC, SoH, voltage, and temperature via monitoring software.                                                               |
|                                |                         | Perform one system shutdown and restart.                                                                                                       |
|                                | 24 months               | Check for abnormal noise during equipment operation.                                                                                           |

# 10. Datasheet

| Model                                            | SUN-14K-SG05LP3-EU-TM3          | SUN-15K-SG05LP3-EU-TM3 | SUN-16K-SG05LP3-EU-TM3 | SUN-18K-SG05LP3-EU-TM3 | SUN-20K-SG05LP3-EU-TM3 |
|--------------------------------------------------|---------------------------------|------------------------|------------------------|------------------------|------------------------|
| Battery Input Data                               |                                 |                        |                        |                        |                        |
| Battery Type                                     | LiFePO <sub>4</sub>             |                        |                        |                        |                        |
| Battery Voltage Range(V)                         | 41.6-58.4                       |                        |                        |                        |                        |
| Battery Module Voltage(V)                        | 51.2                            |                        |                        |                        |                        |
| Max. Charging Current(A)                         | 280                             | 300                    | 320                    | 360                    | 380                    |
| Max. Discharging Current(A)                      | 280                             | 300                    | 320                    | 360                    | 380                    |
| Number of Battery Input                          | 1                               |                        |                        |                        |                        |
| PV String Input Data                             |                                 |                        |                        |                        |                        |
| Max. PV access power(W)                          | 28000                           | 30000                  | 32000                  | 36000                  | 40000                  |
| Max. PV Input Power(W)                           | 22400                           | 24000                  | 25600                  | 28800                  | 32000                  |
| Max. PV Input Voltage(V)                         | 800                             |                        |                        |                        |                        |
| Start-up Voltage(V)                              | 160                             |                        |                        |                        |                        |
| PV Input Voltage Range(V)                        | 160-800                         |                        |                        |                        |                        |
| MPPT Voltage Range(V)                            | 160-650                         |                        |                        |                        |                        |
| Full Load MPPT Voltage Range(V)                  | 310-650                         | 330-650                | 350-650                | 400-650                | 440-650                |
| Rated PV Input Voltage(V)                        | 550                             |                        |                        |                        |                        |
| Max. Operating PV Input Current(A)               | 36+20+20                        |                        |                        |                        |                        |
| Max. Input Short-Circuit Current(A)              | 54+30+30                        |                        |                        |                        |                        |
| No. of MPP Trackers/No. of Strings MPP Tracker   | 3/2+1+1                         |                        |                        |                        |                        |
| Max. Inverter Backfeed Current to The Array      | 0                               |                        |                        |                        |                        |
| AC Input/Output Data                             |                                 |                        |                        |                        |                        |
| Rated AC Input/Output Active Power(W)            | 14000                           | 15000                  | 16000                  | 18000                  | 20000                  |
| Max. AC Input/Output Apparent Power(VA)          | 15400                           | 16500                  | 17600                  | 19800                  | 22000                  |
| Peak Power (off-grid)(W)                         | 2 times of rated power, 10s     |                        |                        |                        |                        |
| Rated AC Input/Output Current(A)                 | 21.3/20.3                       | 22.8/21.8              | 24.3/23.2              | 27.3/26.1              | 30.4/29                |
| Max. AC Input/Output Current(A)                  | 23.4/22.4                       | 25/24                  | 26.7/25.6              | 30/28.7                | 33.4/31.9              |
| Max. Continuous AC Passthrough (grid to load)(A) | 70                              |                        |                        |                        |                        |
| Max. Output Fault Current(A)                     | 46.8                            | 50                     | 53.4                   | 60                     | 66.8                   |
| Max. Output Overcurrent Protection(A)            | 100                             |                        |                        |                        |                        |
| Rated Input/Output Voltage/Range(V)              | 220/380V, 230/400V 0.85Un-1.1Un |                        |                        |                        |                        |
| Grid Connection Form                             | 3L+N+PE                         |                        |                        |                        |                        |
| Rated Input/Output Grid Frequency/Range          | 50Hz/45Hz-55Hz 60Hz/55Hz-65Hz   |                        |                        |                        |                        |
| Power Factor Adjustment Range                    | 0.8 leading-0.8 lagging         |                        |                        |                        |                        |
| Total Current Harmonic Distortion THDi           | <3% (of nominal power)          |                        |                        |                        |                        |
| DC Injection Current                             | <0.5%In                         |                        |                        |                        |                        |
| AC Output (Off-grid)                             |                                 |                        |                        |                        |                        |
| AC Output Voltage [Va.c.]                        | 3L/N/PE,220/380,230/400         |                        |                        |                        |                        |
| AC Output Frequency [Hz]                         | 50/60                           |                        |                        |                        |                        |
| Max. Continuous Apparent Output Power [KVA]      | 15.4                            | 16.5                   | 17.6                   | 19.8                   | 22                     |
| Max. Continuous AC Output Current [Aa.c.]        | 23.4/22.4                       | 25/24                  | 26.7/25.6              | 30/28.7                | 33.4/31.9              |
| Overvoltage Category (OVC)                       | III                             |                        |                        |                        |                        |
| GEN Port                                         |                                 |                        |                        |                        |                        |
| Rated output Voltage [Va.c.]                     | 3L/N/PE,220/380,230/400         |                        |                        |                        |                        |
| Rated output Frequency [Hz]                      | 50/60                           |                        |                        |                        |                        |
| Max. output current [Aa.c.]                      | 32                              |                        |                        |                        |                        |

|                                      |                                                                                                                          |
|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| <b>Efficiency</b>                    |                                                                                                                          |
| Max. Efficiency                      | 97.60%                                                                                                                   |
| Euro Efficiency                      | 96.50%                                                                                                                   |
| MPPT Efficiency                      | >99%                                                                                                                     |
| <b>Equipment Protection</b>          |                                                                                                                          |
| DC reverse polarity protection       | Yes                                                                                                                      |
| AC Output Overcurrent Protection     | Yes                                                                                                                      |
| AC Output Overvoltage Protection     | Yes                                                                                                                      |
| AC Output Short Circuit Protection   | Yes                                                                                                                      |
| Thermal Protection                   | Yes                                                                                                                      |
| Insulation Impedance detection       | Yes                                                                                                                      |
| DC Component Monitoring              | Yes                                                                                                                      |
| Arc fault circuit interrupter (AFCI) | Optional                                                                                                                 |
| Anti-islanding protection            | Yes                                                                                                                      |
| DC Switch                            | Yes                                                                                                                      |
| Residual Current Detection           | Yes                                                                                                                      |
| Surge Protection Level               | TYPE II(DC), TYPE II(AC)                                                                                                 |
| <b>Interface</b>                     |                                                                                                                          |
| Display                              | LCD+LED                                                                                                                  |
| Communication Interface              | RS485,CAN                                                                                                                |
| Monitor Mode                         | GPRS/WIFI/Bluetooth/4G/LAN(optional)/LoRa                                                                                |
| <b>General Data</b>                  |                                                                                                                          |
| Max. Operating Frequency(Hz)         | 200M                                                                                                                     |
| Operating Temperature Range          | Charge: 1~55℃ / Discharge: -20~55℃, >45℃ Derating                                                                        |
| Permissible Ambient Humidity         | 0-100%                                                                                                                   |
| Permissible Altitude                 | 3000m                                                                                                                    |
| Noise                                | ≤55dB                                                                                                                    |
| Ingress Protection(IP) Rating        | IP 66                                                                                                                    |
| Inverter Topology                    | Isolated                                                                                                                 |
| Over Voltage Category                | OVC II(DC), OVC III(AC)                                                                                                  |
| Cabinet size(W*H*D) [mm]             | 662W*450H*255D (Excluding connectors and brackets)                                                                       |
| Weight(kg)                           | 41.7                                                                                                                     |
| Warranty                             | Standard 5 years, extendable warranty                                                                                    |
| Type of Cooling                      | Intelligent air cooling                                                                                                  |
| Grid Regulation                      | IEC 61727, IEC 62116, CEI 0-21, EN 50549, NRS 097, RD 140, UNE 217002, OVE-Richtlinie R25, G99, VDE-AR-N 4105, AS 4777.2 |
| Safety EMC/Standard                  | IEC 62477, IEC 62619, SA TS 5398, IEC 62040, IEC62109-1/-2, EN61000-6-1, EN61000-6-2, EN61000-6-3, EN61000-6-4           |

| Model                        |                 | AI-W16                              | AI-W16-H                                           |
|------------------------------|-----------------|-------------------------------------|----------------------------------------------------|
| Main Parameter               |                 |                                     |                                                    |
| Battery Chemistry            |                 | LiFePO <sub>4</sub>                 |                                                    |
| Built-in Circuit Breaker     |                 | 250A, 80Vdc                         |                                                    |
| Rated Capacity (Ah) [1]      |                 | 314                                 |                                                    |
| Nominal Voltage (V)          |                 | 51.2                                |                                                    |
| Operating Voltage(V)         |                 | 41.6-58.4                           |                                                    |
| Nominal Energy (kWh) [1]     |                 | 16                                  |                                                    |
| Usable Energy (kWh)[1]       |                 | 14.4                                |                                                    |
| Charge Current (A) [2]       | Max. Continuous | 160                                 |                                                    |
|                              | Peak            | 192                                 |                                                    |
| Discharge Current (A) [2]    | Max. Continuous | 220                                 |                                                    |
|                              | Peak            | 264                                 |                                                    |
| Other Parameter              |                 |                                     |                                                    |
| Recommend Depth of Discharge |                 | 90% DoD                             |                                                    |
| Dimension (mm, W/H/D)        |                 | 662 x 715 x 255 (Without base)      |                                                    |
| Weight (kg)                  |                 | 120kg                               |                                                    |
| Display                      |                 | LED(working, protecting, alarming)  |                                                    |
| IP Rating of Enclosure       |                 | IP66                                |                                                    |
| Operating Temperature(°C)    |                 | Charge: 1~55°C, Discharge: -20~55°C | Charge: -20~55°C (Heating On), Discharge: -20~55°C |
| Storage Temperature (°C)     |                 | 0-35                                |                                                    |
| Relative Humidity            |                 | 95% (non-condensing)                |                                                    |
| Cycle Life                   |                 | ≥8000(25°C±2°C ,70%EOL)             |                                                    |
| Max. Energy RTE (DC) [1]     |                 | 95%                                 |                                                    |
| Installation                 |                 | Floor-Mounted , Stack-Mounted       |                                                    |
| Communication                |                 | CAN2.0                              |                                                    |
| Certification                |                 | UN38.3, CE, CB, UL9540A             |                                                    |
| Energy Throughput [3]        |                 | 50 MWh                              |                                                    |
| Warranty Period [3]          |                 | 10 years                            |                                                    |

[1] Test conditions : 25°C±2°C, at beginning of life, 0.2C charge & 0.2C discharge, 90% DOD.

[2] The current is affected by temperature and SOC.

[3] Conditions apply, refer to Deye Warranty Letter.

## 11. Transportation and Storage

### 11.1 Transportation and storage of the inverter module

#### Protection During Transportation

1. The ambient temperature during the whole transportation process shall be maintained within -40 C~+70 C , and the relative humidity shall be controlled at 0~100% without condensation. Temperature control protection shall be prepared in advance for transportation in extreme low or high temperature areas.

2. Avoid severe bumps, impacts and violent vibration during transportation. It is strictly forbidden to use the equipment as a load-bearing footrest or drag it on the ground, to prevent precision components such as IGBTs and electrolytic capacitors inside from loosening and falling off due to impact.

3. For sea transportation scenarios, place sufficient desiccants inside the container to avoid corrosion of metal parts and degradation of electrical insulation performance of the equipment caused by long-term high salt spray and high humidity environment.
4. Never remove the outer packaging carton of the equipment during the whole transportation process. After arrival, let the equipment stand still in a dry and ventilated environment for more than 2 hours before unpacking inspection, to avoid condensation inside the equipment caused by temperature difference that damages the components.

## 11.2 Transportation and storage of the battery module

For the transportation and storage requirements of battery modules, please refer to the corresponding chapters in its manual. Scan the QR code below to enter the "Download Center", then enter "AI-W16" in the Key words dialog box, and you can find the download link for the user manual of the AI-W16 battery module in the search results, or click directly"  
<https://deye-eess.com/downloads/###> "Repeat the above steps to obtain the download link for the battery module user manual



## 12. Disposing Instructions

### 12.1 Disposing of the ESS

Do not dispose of inverter together with household waste. Please accordance with the disposal regulations for electronic waste which apply at the installation site at that time. Ensure that the old unit and, where applicable, any accessories are disposed of in a proper manner.

### 12.2 Disposal of the battery module

- ① Please follow all applicable regulations for waste battery disposal.
- ② Stop using the battery immediately if it is damaged.
- ③ Before disposal, contact your installer or sales partner for proper guidance.
- ④ Make sure the battery is not exposed to moisture or direct sunlight.



#### ATTENTION:



- \* Do not throw batteries or rechargeable batteries into household waste! You are legally required to return used batteries and rechargeable batteries to designated collection points.
- \* Waste batteries may contain harmful substances that can damage the environment or harm your health if not handled or stored properly.
- \* Batteries also contain iron, lithium, and other valuable raw materials that can be recycled.

# 13. RJ45 Port Pin Definitions

## 13.1. Definition of RJ45 Port Pin for RS485.

| No. | BMS 485/CAN Pin |
|-----|-----------------|
| 1   | BMS-485_B       |
| 2   | BMS-485_A       |
| 3   | BMS-GND_485     |
| 4   | CAN-H           |
| 5   | CAN-L           |
| 6   | BMS-GND_485     |
| 7   | BMS-485_A       |
| 8   | BMS-485_B       |

BMS 485/CAN Port

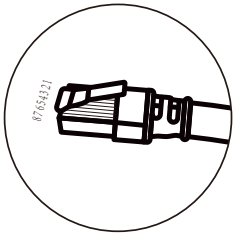



## 13.2. Definition of RJ45 Port Pin for Meter.

This port is used to communicate with energy meter.

| No. | Meter Pin   |
|-----|-------------|
| 1   | METER-485-B |
| 2   | METER-485-A |
| 3   | A+5V        |
| 4   | METER-485-B |
| 5   | METER-485-A |
| 6   | AGND        |
| 7   | METER-485-A |
| 8   | METER-485-B |

Meter port

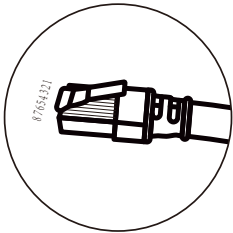





**13.3.Definition of RJ45 Port Pin for Modbus port.**

Definition of RJ45 Port Pin of "Modbus port" for remotely monitoring.

| No. | Modbus Pin     |
|-----|----------------|
| 1   | SUNSPE-485_B   |
| 2   | SUNSPE-485_A   |
| 3   | GND_SUNSPE-485 |
| 4   |                |
| 5   |                |
| 6   | GND_SUNSPE-485 |
| 7   | SUNSPE-485_A   |
| 8   | SUNSPE-485_B   |

Modbus Port

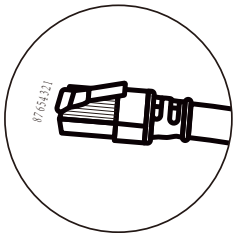



**13.4.Definition of RJ45 Port Pin for DRM.**

DRM: Only inverters with DRM function selected have this port.

It is used to accept the external control command.


| No. | DRM Pin   |
|-----|-----------|
| 1   | DRM1/5    |
| 2   | DRM2/6    |
| 3   | DRM3/7    |
| 4   | DRM4/8    |
| 5   | REF-GEN/0 |
| 6   | GND       |
| 7   | NetDRM_7  |
| 8   | NetDRM_7  |

DRM port

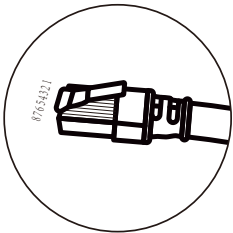

# 14. Current Transformer (CT) Dimensions and Cable Length

- 1. Split Core Current Transformer (CT) dimension: (mm)
- 2. Secondary output cable length is 4m.

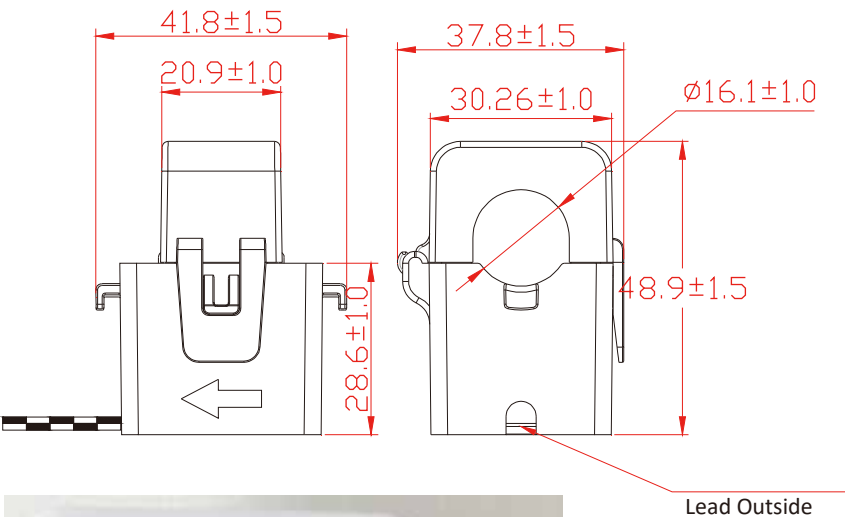

---

# 15. EU Declaration of Conformity

within the scope of the EU directives

- Radio Equipment Directive (RED) 2014/53/EU.
- Restriction of the use of certain Hazardous Substances (RoHS) Directive 2011/65/EU and 2015/863/EU



NINGBO DEYE INVERTER TECHNOLOGY CO., LTD. confirms herewith that the products described in this document are in compliance with the fundamental requirements and other relevant provisions of the above mentioned directives. The entire EU Declaration of Conformity and certificate can be found at “[https://www.deyeinverter.com/download/Declaration\\_of\\_Conformity/?tag=48](https://www.deyeinverter.com/download/Declaration_of_Conformity/?tag=48)” or downloaded by scanning the QR code below.



V.1.1.0 2026-09-23

## NINGBO DEYE INVERTER TECHNOLOGY CO., LTD.

Add.: No.26 South YongJiang Road, Daqi, Beilun, NingBo, China.

Tel.: +86 (0) 574 8622 8957

Fax.: +86 (0) 574 8622 8852

E-mail: [service@deye.com.cn](mailto:service@deye.com.cn)

Web.: [www.deyeinverter.com](http://www.deyeinverter.com)



30240301005972